

USE MANUAL


Car Stereo for Toyota Highlander 2014-2019

Central Control Disassembly and Operation

Post-installation rendering



Wiring diagram

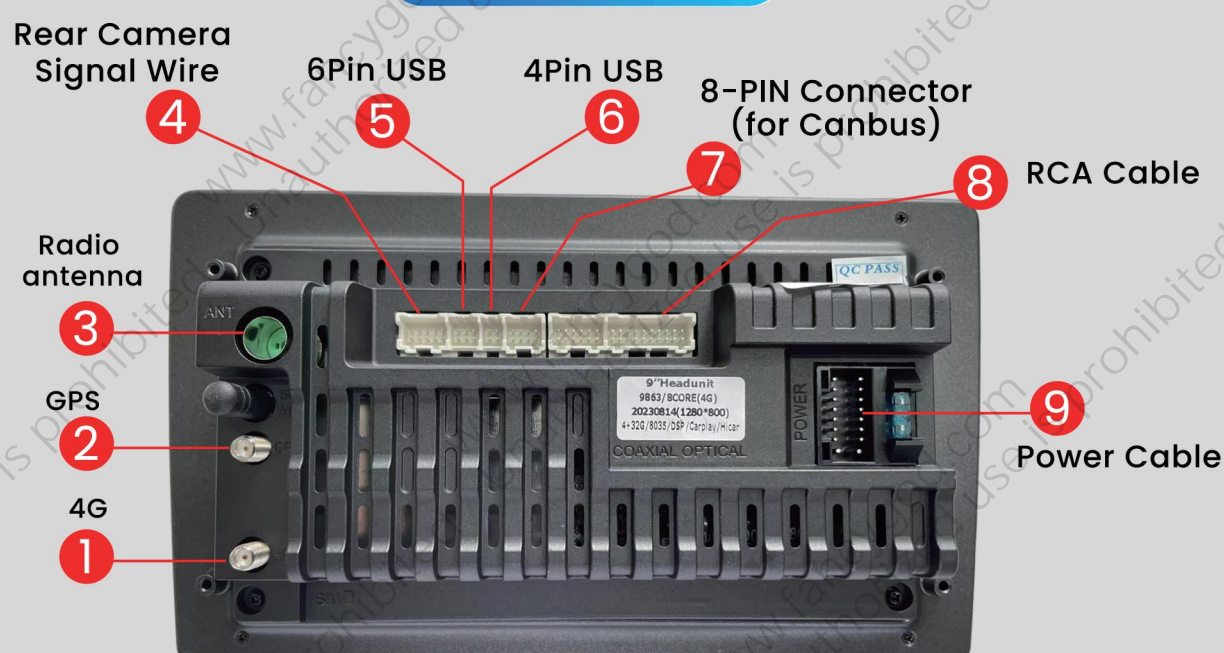


**MIND the connector clip direction
(clips end facing down).**




D-Cables XC-933

Connect the original car harness plug: power/speaker/SWC

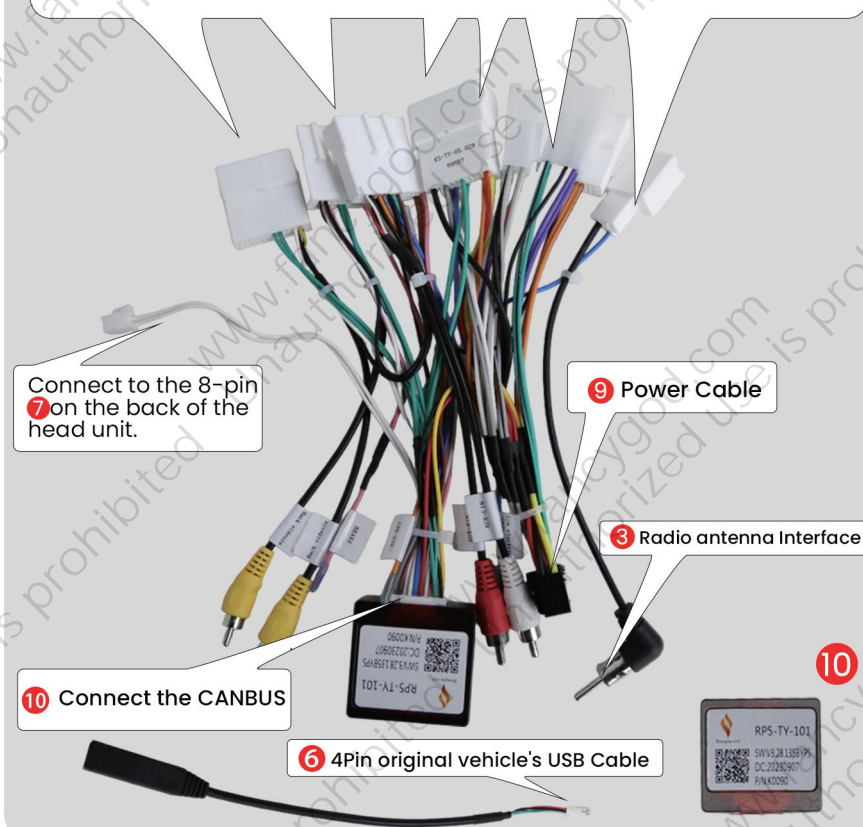

Power Line Definition Chart

| | | | |
|-----------------------|--|--|--------------------------|
| Front Left (+) | | | Rear Right (+) |
| Front Left (-) | | | Rear Right (-) |
| Front Right (+) | | | Rear Left(+) |
| Front Right (-) | | | Rear Left(-) |
| Steering Wheel Key(+) | | | Power Antenna(+) |
| Rear Camera(+) | | | Steering Wheel Key 2 (+) |
| Accessory/Ignition(+) | | | Dimmer/Illumination (+) |
| Chassis Ground (-) | | | Constant power supply |

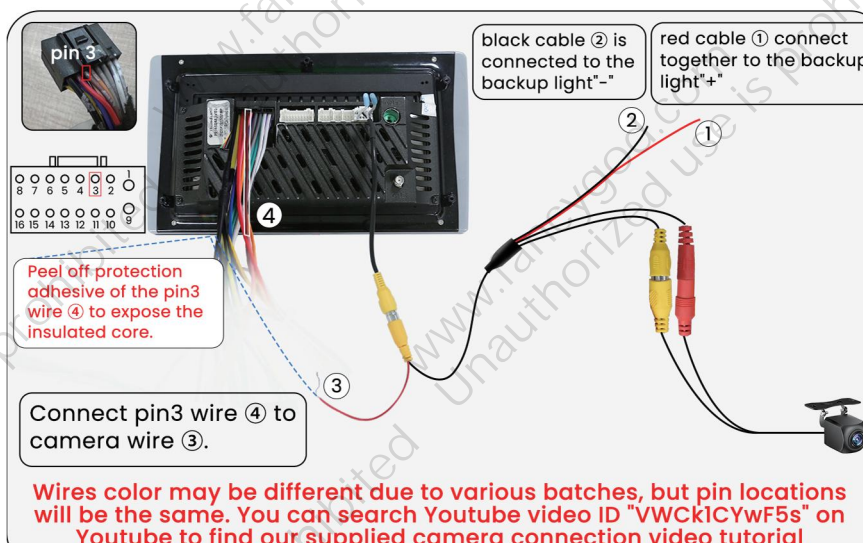


For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:

<http://www.fancygod.com>

Instructions




Note: Since the D-type cable (XC-933) contains multiple plugs, the required cable varies depending on the factory radio. To avoid issues such as the radio not powering on due to incorrect cable connections; or the volume not being adjustable, steering wheel controls not functioning, and sound abnormalities due to setting errors, be sure to carefully follow the installation tutorial steps and the corresponding setup steps.

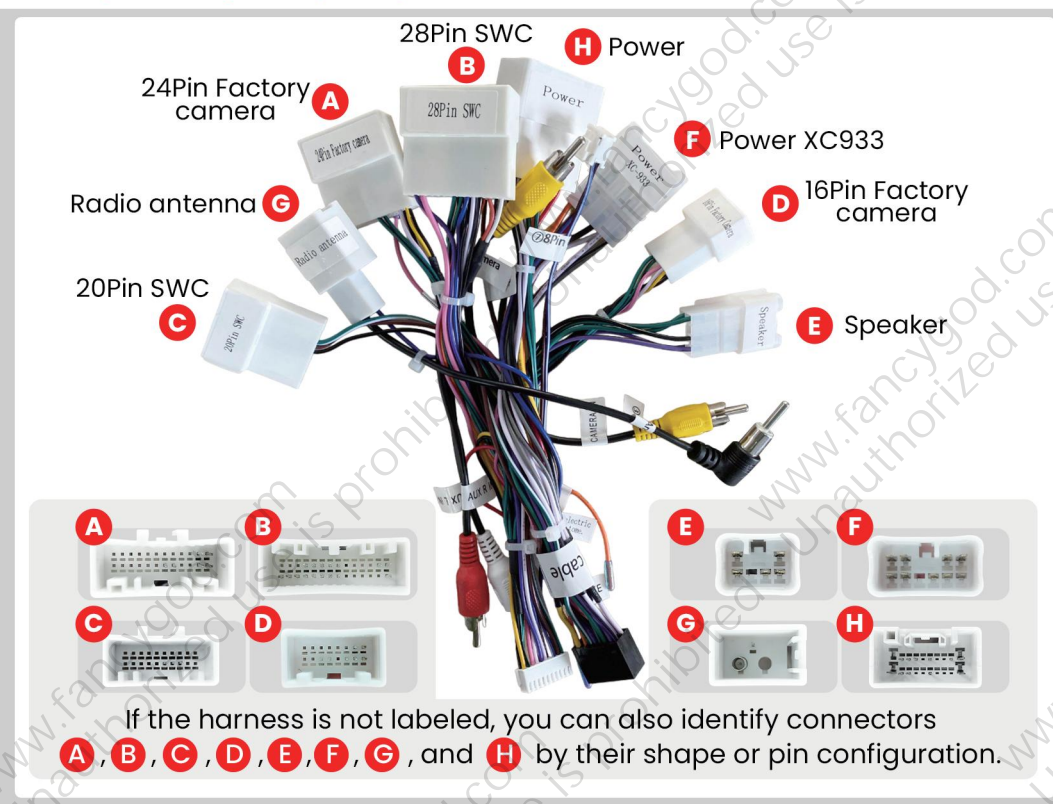


If the harness is not labeled, you can also identify connectors A, B, C, D, E, F, G, and H by their shape or pin configuration.

If your factory radio matches Image ①, please connect F, E, B and G harness from the D-cable (XC-933) (The remaining harness do not need to be connected) to the plugs from factory radio, and follow the steps shown in Image ②
Please press "Settings" → "Factory Settings" (enter password 3368) → Car Model," and set it to "NULL-OTHER -No Protocol-Null."

If your car has steering wheel control buttons, according to Image ③, please open the SWC app on the radio and refer to the app's instructions to manually learn the steering wheel control keys.

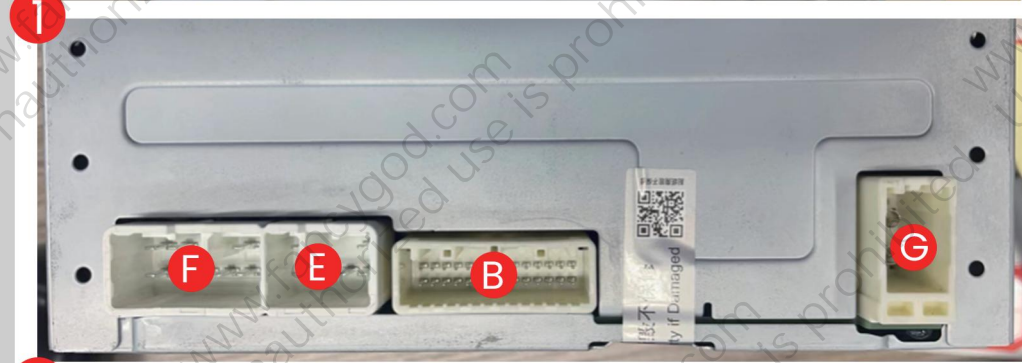

If your factory radio matches Image ④, please connect F, E, A, B and G harness from the D-cable (XC-933) (The remaining harness do not need to be connected) to the plugs from factory radio, and follow the steps shown in Image ⑤
Please press "settings" → "Factory Settings" (enter password 3368) → "Car Model," and set it to "XP (simple) - Toyota - Camry - XP."

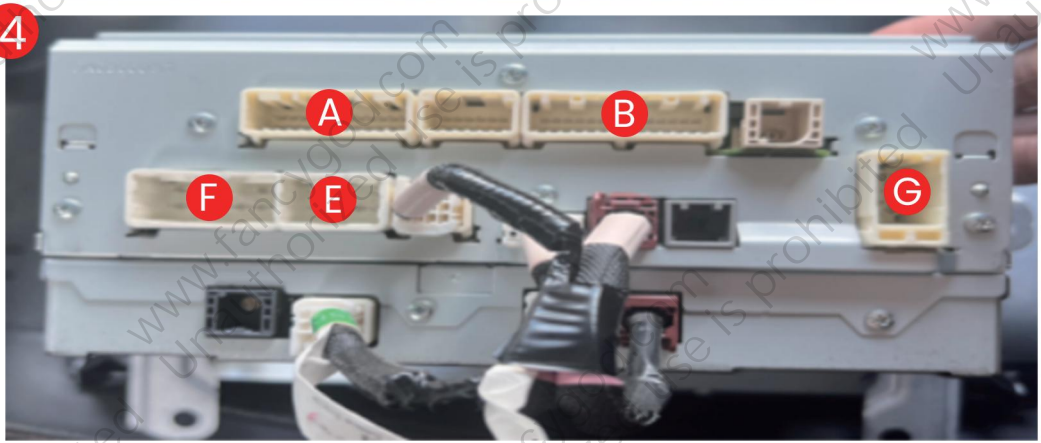

| CAN Box type | Car Brand | Car Model | CAN Box |
|--------------|-------------------|-----------|-----------------|
| ★ XP(Simple) | ★ Toyota | ★ Camry | ★ XP |
| ★ OD | ★ Nissan | ★ RAV4 | ★ AMP |
| ★ LSDT | ★ Ford | ★ PRADO | ★ 2018 |
| ★ BNR | ★ Jeep | ★ Tr1151 | ★ 2018.HIGH.AMP |
| ★ DaoJun | ★ OPEL | | |
| ★ XBS | ★ Peugeot/Citroen | | |
| Camry | | | |

If your factory radio matches Image ⑥ (with JBL sound system), please connect H, A, B and G harness from the D-cable (XC-933) (The remaining harness do not need to be connected) to the plugs from factory radio, and follow the steps shown in Image ⑦
Please press "Settings" → "Factory Settings" (input password 3368) → Car Model," and set it to "XP(simple) - Toyota - Camry - AMP."

If sound abnormalities persist after selecting AMP, switch the CAN Box option to "2018.HIGH.AMP."



| CAN Box type | Car Brand | Car Model | CAN Box |
|--------------|-------------------|-----------|-----------------|
| ★ XP(Simple) | ★ Toyota | ★ Camry | ★ XP |
| ★ OD | ★ Nissan | ★ RAV4 | ★ AMP |
| ★ LSDT | ★ Ford | ★ PRADO | ★ 2018 |
| ★ BNR | ★ Jeep | ★ Tr1151 | ★ 2018.HIGH.AMP |
| ★ DaoJun | ★ OPEL | | |
| ★ XBS | ★ Peugeot/Citroen | | |
| Camry | | | |