

USE MANUAL

Car Stereo


For Nissan Altima 2013-2018

Central Control Disassembly and Operation

Post-installation rendering



Wiring diagram

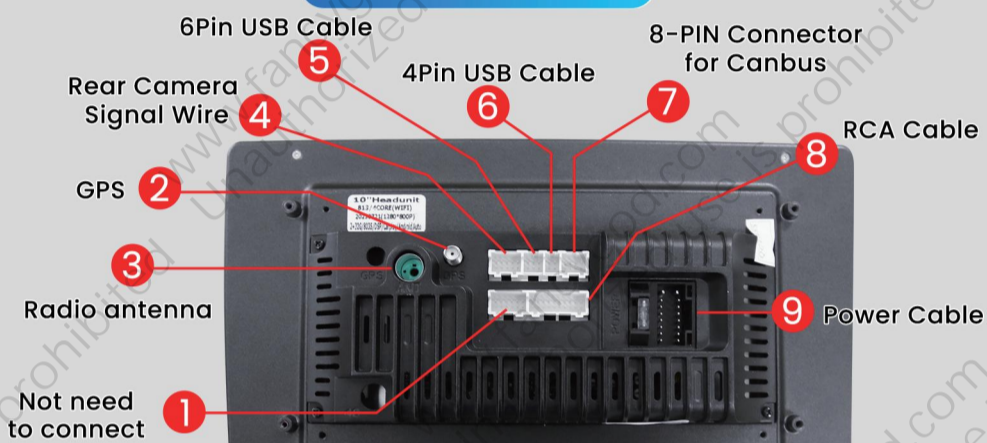


MIND the connector clip direction (clips end facing down).




A-cable XC-1522

Connect the original car harness plug: power/speaker/SWC

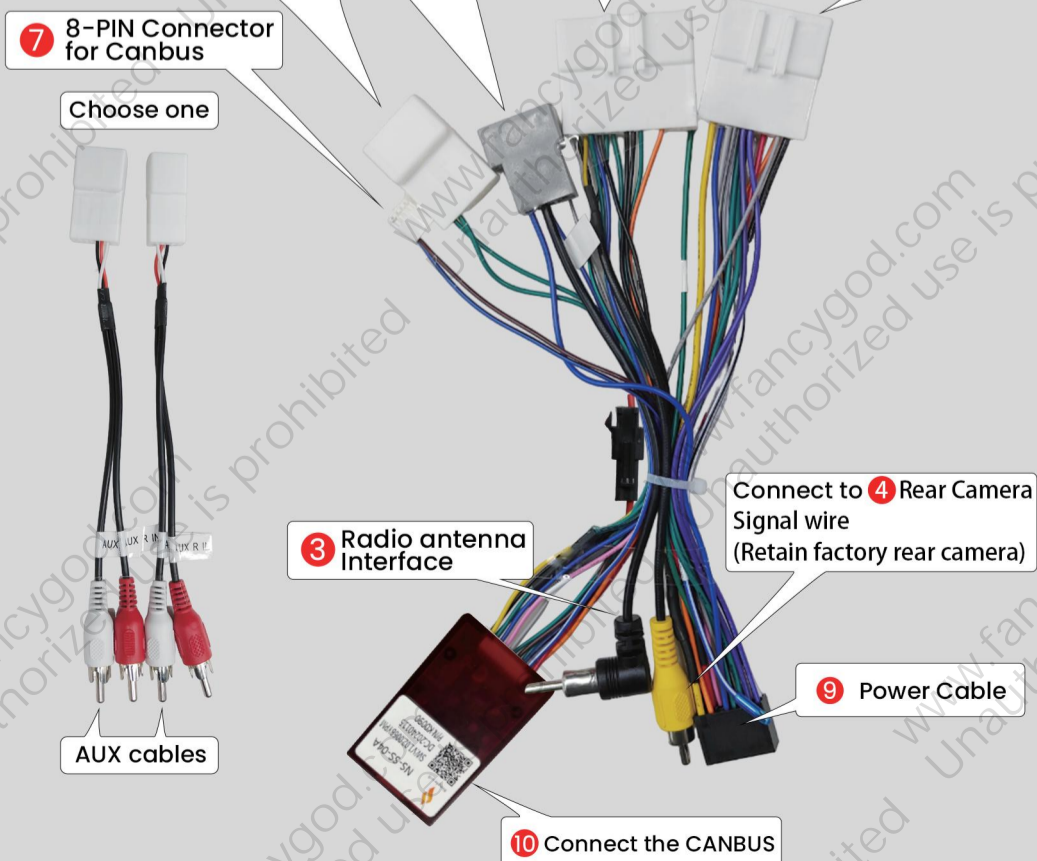


B-Cables XC-1292

Connect the original car harness plug: power/speaker/SWC

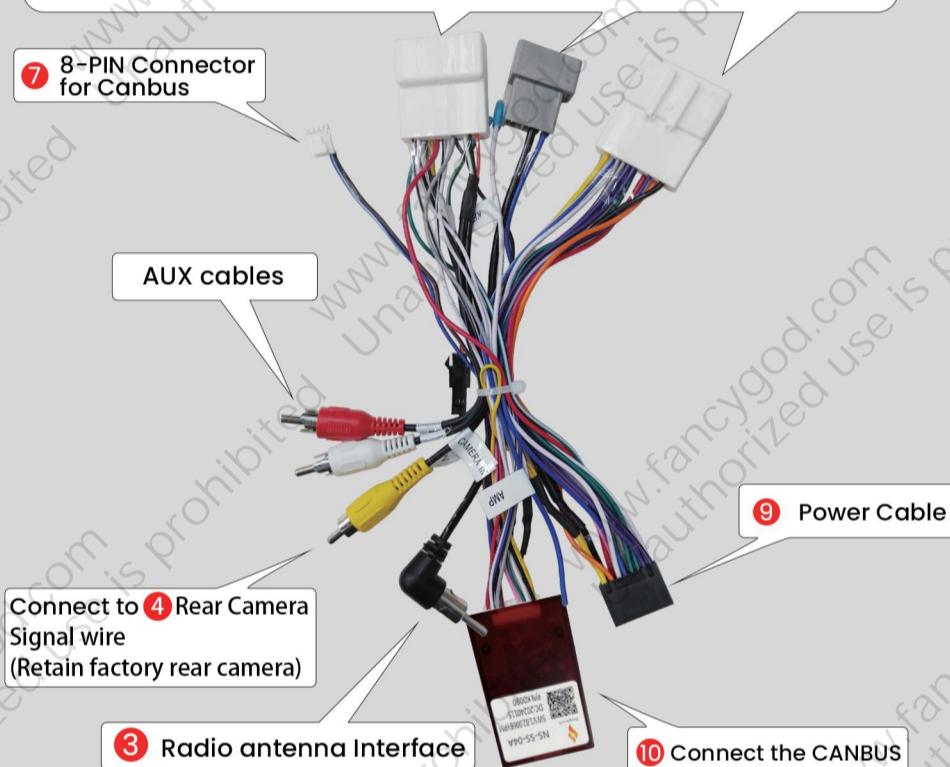

Power Line Definition Chart

Front Left (+)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Right (+)
Front Left (-)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Right (-)
Front Right (+)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Left(+)
Front Right (-)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Left(-)
Steering Wheel Key(+)	<input type="checkbox"/>	<input type="checkbox"/>	Power Antenna(+)
Rear Camera(+)	<input type="checkbox"/>	<input type="checkbox"/>	Steering Wheel Key 2 (+)
Accessory/Ignition(+)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Dimmer/Illumination (+)
Chassis Ground (-)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Constant power supply

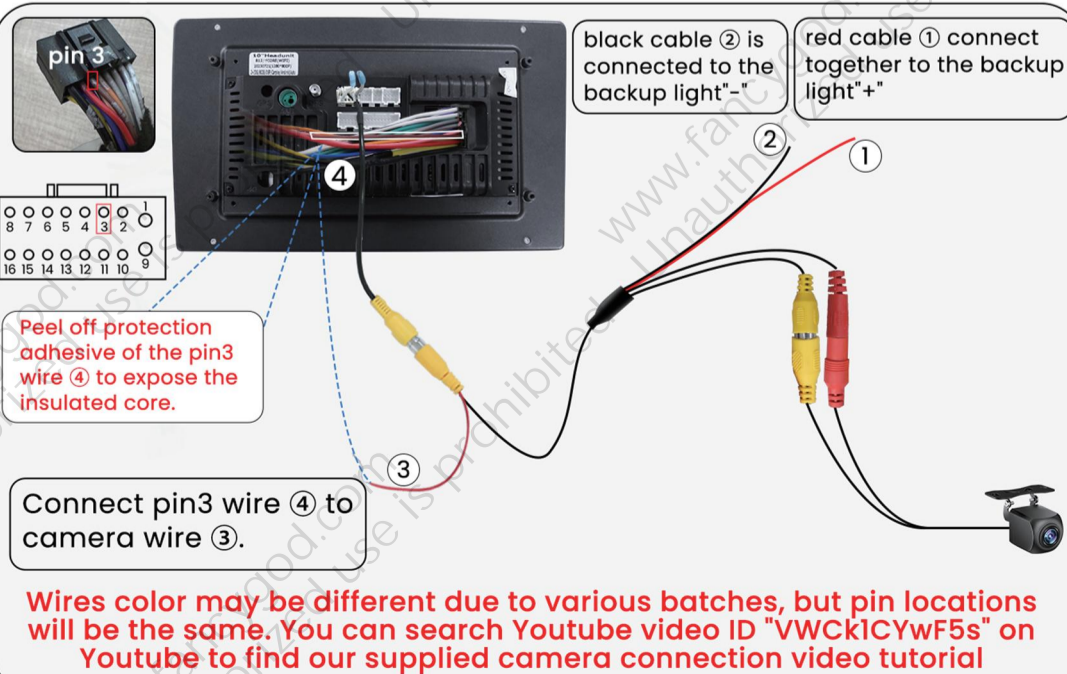

If your factory radio matches the one shown in Picture 1 please use the **A-cable 'XC-1522'**. Make sure to check whether the factory connectors include the steering wheel control wire to determine the next setup steps.



If your factory radio connector matches the one shown in Picture 2 and does not have the steering wheel control wires, please ensure to set it up according to Picture 3 to prevent any issues with steering wheel controls, air conditioning, or volume: Please enter Settings — Factory(input"3368") — Car Model, and select XP(Simple) — Nissan — TEANA — 2013.


Factory radio connector does not have the steering wheel control wire



CAN Box type	Car Brand	Car Model	CAN Box
★ XP(Simple)	★ Nissan	★ ALL	★ 2013
★ OD	★ Ford	★ TRIAL	★ 2009
★ LSdT	★ Jeep	★ MURANO	
★ BNR	★ OPEL	★ Qashqai	
★ DaoJun	★ Peugeot/Citroen	★ Sylphy	
★ XBS	★ CHERY	★ TEANA	



If your factory radio connector matches the one shown in Picture 4 and has the steering wheel control wires, please ensure to set it up according to Picture 5: Please enter Settings — Factory(input"3368") — Car Model, and select NULL — OTHER — No Protocol — Null.

Factory radio connector has the steering wheel control wire

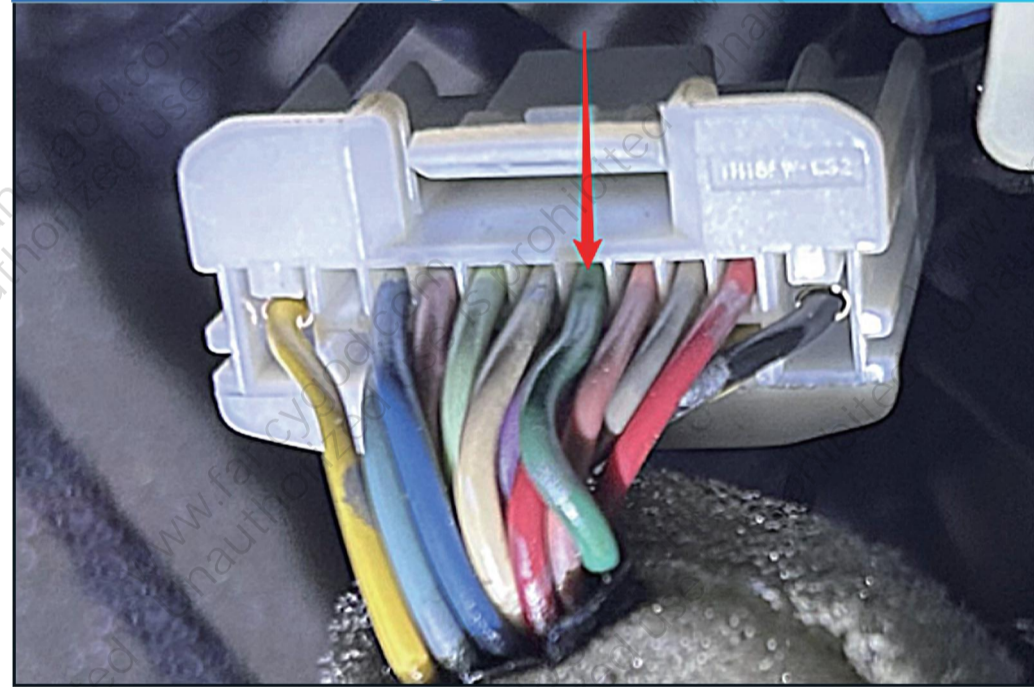

If your car has steering wheel control buttons, to prevent any issues with the steering wheel controls not functioning properly, please open the SWC app to manually learn the swc keys accordingly, as shown in picture 6 .

CAN Box type	Car Brand	Car Model	CAN Box
★ NULL	★ OTHER	★ No protocol	★ Null
★ ZH 2			
★ HIWORLD			
★ RZC(Raise)			
★ XP(Simple)			
★ OD			

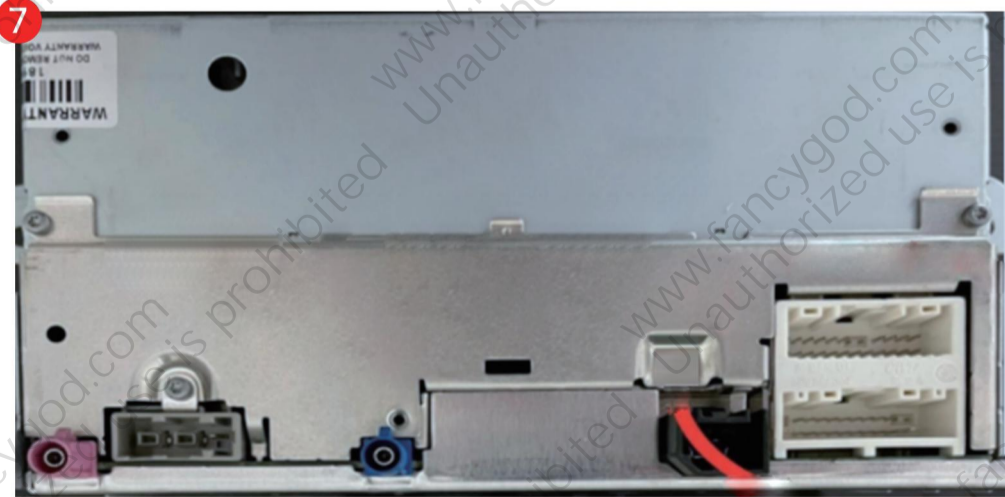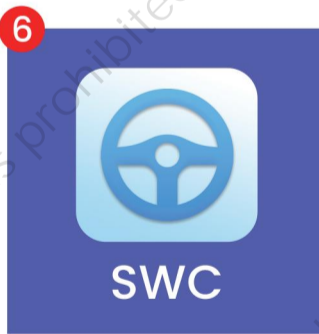

If your factory radio matches the one shown in Picture 7 , please use the **B-cable 'XC-1292'**.

To prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please ensure to set it up according to pic 3 :

Please enter Settings — Factory(input"3368") — Car Model, and select XP(Simple) — Nissan — TEANA — 2013.

For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:
<http://www.fancygod.com>

Instructions

