
USE MANUAL

Car Stereo

For GMC Yukon 2007-2013


For Chevrolet Tahoe / Suburban 2007-2013


Central Control Disassembly and Operation

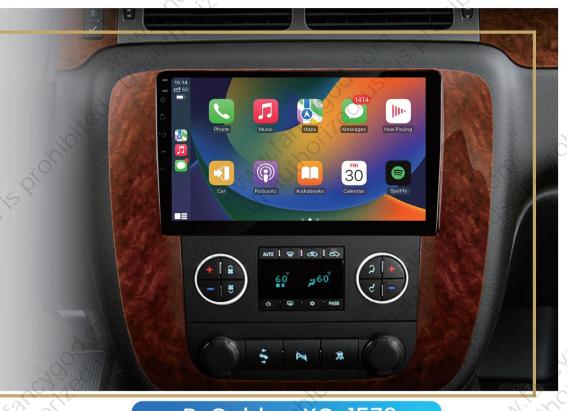






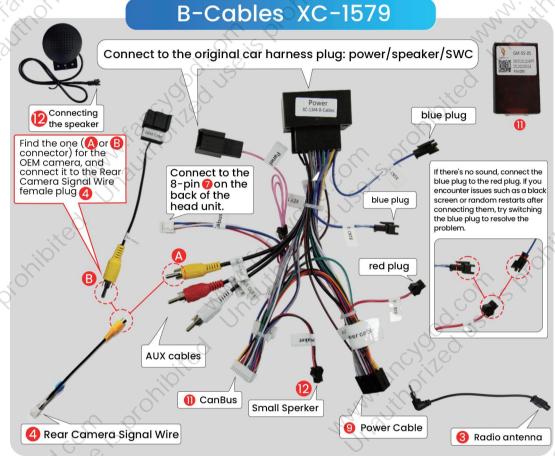

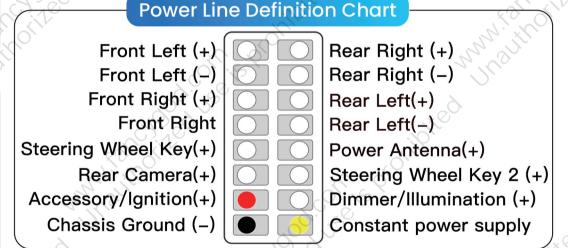

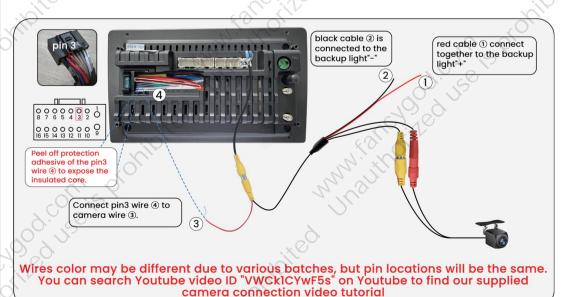

For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:



If your factory radio matches image 1, please use A-cables. If your car has a BOSE system, please connect the gray plug in picture 4.




If your factory radio matches image 2, please use **B-Cables**.



To prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please be sure to follow the steps shown in image 3:


Please press Settings—Factory (input password 3368)—Car Model, and select "XP(Simple) — GM/Chevrolet — ALL — XP(L)"

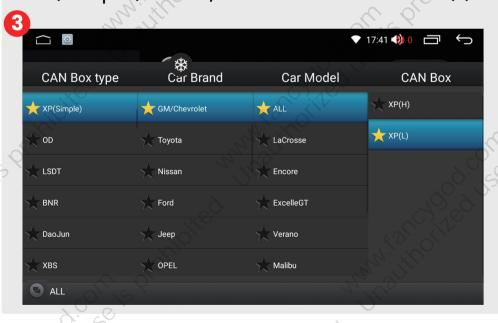


If your factory radio matches the one shown in image 1 and the rear speakers don't work or have no sound after using A-cables. Please connect the female plug with the label name "Rear Speaker" (shown in image 4) to the factory male plug.

If there's no "Rear Speaker" label, please identify the correct female plug by the pin configuration (shown in image 5)

If there's still no sound after connecting the "Rear Speaker"plug, please find the "10 20-pin CANBUS" cable in A-cables, and cut this pin 18 wire (as shown in image 6) off in the "10 20pin CANBUS" cable.

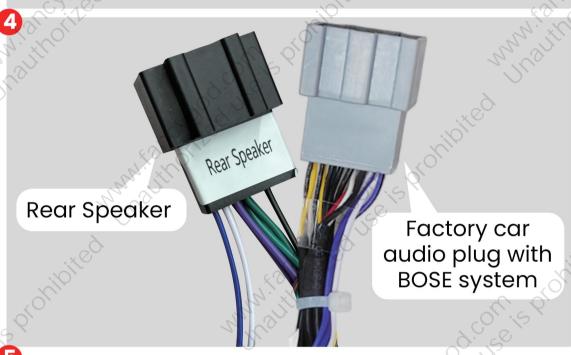



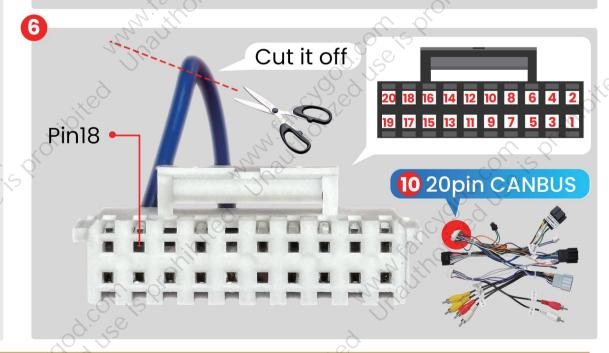

FCC warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not causeharmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.