# **USE MANUAL**

Car Stereo

for Honda Pilot 2006-2008

**Central Control Disassembly and Operation** 


Post-installation rendering




# Wiring diagram Spin USB Cable Apin USB Cable Signal Wire Apin USB Cable RCA Cable RCA Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA Cable RCA Cable RCA Cable Rear Camera Signal Wire Apin USB Cable RCA C





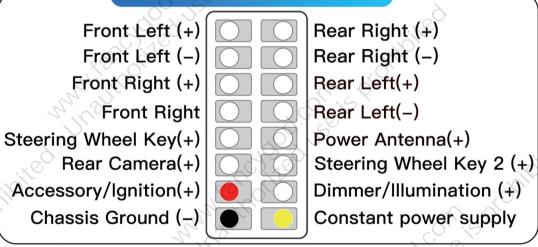

**Power Line Definition Chart** 

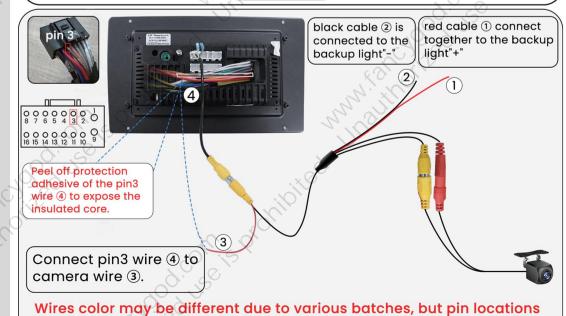


will be the same. You can search Youtube video ID "VWCk1CYwF5s" on Youtube to find our supplied camera connection video tutorial

Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.

Please be sure to follow the steps shown in pic (1), press Setting→Factory (input password 3368)→Car Model to choose "NULL—OTHER—No protocol—Null".

If your car has steering wheel control buttons, to prevent the steering wheel controls not working properly, please open the SWC app on the radio and refer to the app's instruction to manual learn the steering wheel control keys accordingly (as shown in pic (2)).



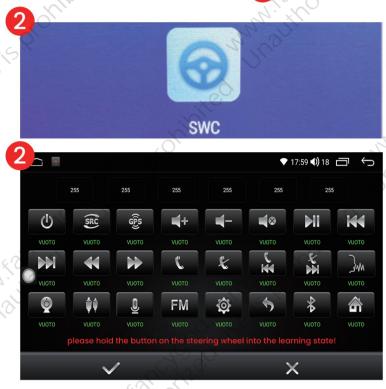

## FAQ

### Q: How to use wireless Apple CarPlay?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Open the Carlink 2.0 App on the car radio to activate Carplay. (Scan the QR code on the right to view the video tutorial)



### Q: How to use wireless Android auto?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Download the Android Auto APP at your phone's Play store first (Confirm the phone can support Android Auto).
- 3. Open the Carlink 2.0 App on the car radio to activate Android Auto. (Scan the QR code on the right to view the video tutorial)



For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:



The barcode is for our warehouse outbound use only and is not relevant for installation.

