# **USE MANUAL**

Car Stereo


for Toyota Highlander 2000-2007

Central Control Disassembly and Operation

Post-installation rendering



### Wiring diagram

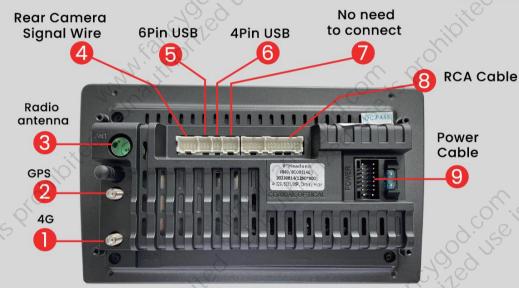














### C-Cables XC-1380

Connect to the original car harness plug: power/speaker/SWC

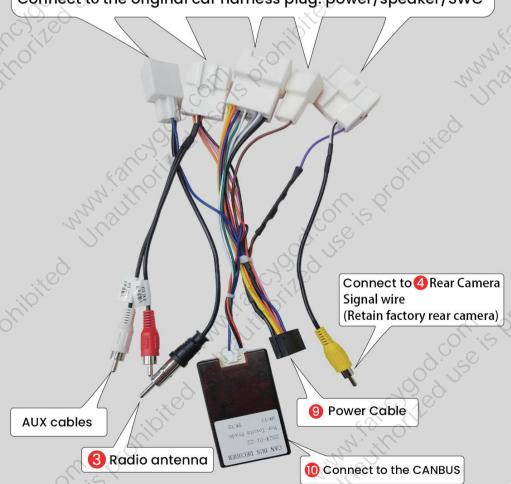

#### B-Cables XC-392

Connect to the original car harness plug: power/speaker/SWC




For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:


**Instructions** 



The barcode is for our warehouse outbound use only and is not relevant for installation.



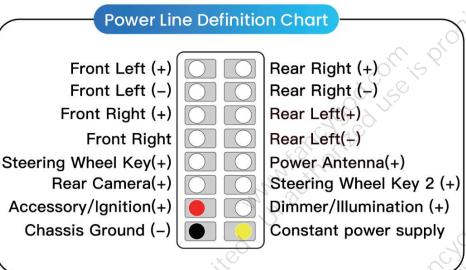

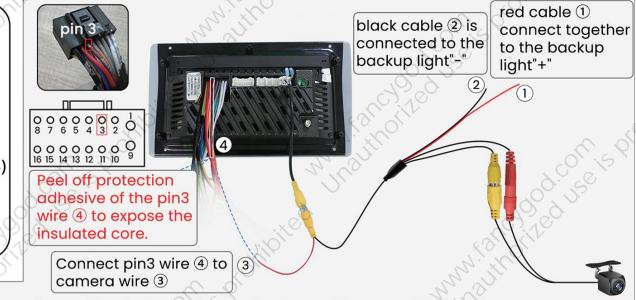

Wires color may be different due to various batches, but pin locations will be the same.
You can search Youtube video ID "VWCkICYwF5s" on Youtube to find our
supplied camera connection video tutorial

If your factory radio matches the one in image (1), use **C-Cables**.





If your factory radio matches the one in image 2, use **B-Cables**.



After connecting the cables, please be sure to follow these steps:

According to Image (3), please press "Settings"→
"Factory Settings" (enter password 3368) → "Car
Model," to choose "NULL—OTHER—No Protocol—Null."

If your car has steering wheel control buttons, according to Image 4, please open the SWC app on the radio and refer to the app's instructions to manually learn the steering wheel control keys.







If you are using the XC-1380 harness and there is no sound after installation, please scan the QR code to get the solution.



## FCC warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not causeharmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.