
# **USE MANUAL**

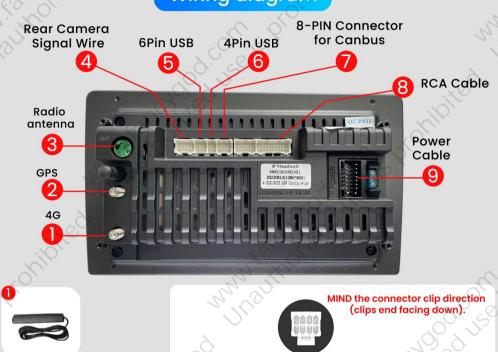











Connect to the original car harness plug: power/speaker/SWC

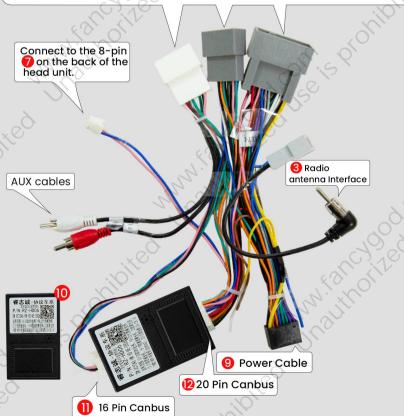



#### **Power Line Definition Chart**

Rear Right (+) Front Left (+) Front Left (-) Rear Right (-) Front Right (+) Rear Left(+) Front Right Rear Left(-) Steering Wheel Key(+) Power Antenna(+) Steering Wheel Key 2 (+) Rear Camera(+) Accessory/Ignition(+) Dimmer/Illumination (+) Chassis Ground (-) Constant power supply

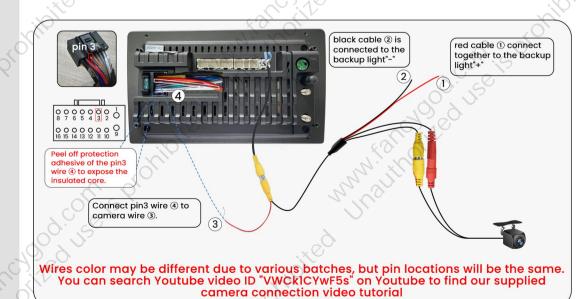

For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:



Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.

If you are using **A-cables**, please follow the steps shown in picture 1: Enter Settings → Factory (enter password 3368), then select Car Model and choose "NULL—OTHER—No protocol—Null."


If your car has steering wheel control buttons, to ensure they work properly, open the SWC app on the radio and follow the app's instructions to manually learn the steering wheel control keys (as shown in picture 2).



If there's no sound coming from the radio, please connect the two plugs as the picture shown below.





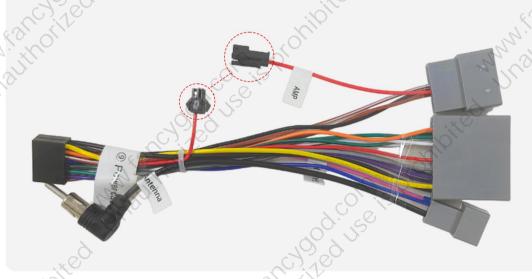


If you are using **B-cables**, to prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please follow the steps shown in Image 3:

Press Settings → Factory (input password: 3368) → Car Model, and select 'RZC (Raise) — Honda

— CIVIC — 2014.Low'.



If there's no sound coming from the radio, please connect the blue wire (2 and 3) to the red wire 1 separately to see which one can make the sound work.

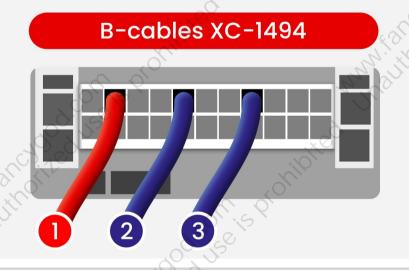

## FAQ

### Q: How to use wireless Apple CarPlay?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Open the Carlink 2.0 App on the car radio to activate Carplay. (Scan the QR code on the right to view the video tutorial)



## Q: How to use wireless Android auto?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Download the Android Auto APP at your phone's Play store first (Confirm the phone can support Android Auto).
- 3. Open the Carlink 2.0 App on the car radio to activate Android Auto. (Scan the QR code on the right to view the video tutorial)

