

USE MANUAL

Car Stereo

Dodge Grand Caravan

2011-2016

Central Control Disassembly
and Operation

Post-installation rendering



Wiring diagram



A-cables XC-1386

Connect to the original car harness plug: power/speaker/SWC

Connect to the 8-pin
7 on the back of the
head unit.

11 AMP Port

The car is not equipped
with an amplifier
11+A
8pin

The car is equipped
with an amplifier
(Alpine or Infinity system)
11+B
4pin

9 power Cable

10 Connect to the CANBUS

3 Radio antenna

B-cables XC-1387

Connect to the original car harness plug: power/speaker/SWC

Connect to the 8-pin
port 7 on the back of
the head unit.

11 AMP Port

The car is not equipped
with an amplifier
11+A
8pin

The car is equipped
with an amplifier
(Alpine or Infinity system)
11+B
4pin


10 Connect to the CANBUS

9 power Cable

3 Radio antenna

Power Line Definition Chart

Front Left (+)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Right (+)	<input type="checkbox"/>
Front Left (-)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Right (-)	<input type="checkbox"/>
Front Right (+)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Left(+)	<input type="checkbox"/>
Front Right (-)	<input type="checkbox"/>	<input type="checkbox"/>	Rear Left(-)	<input type="checkbox"/>
Steering Wheel Key(+)	<input type="checkbox"/>	<input type="checkbox"/>	Power Antenna(+)	<input type="checkbox"/>
Rear Camera(+)	<input type="checkbox"/>	<input type="checkbox"/>	Steering Wheel Key 2 (+)	<input type="checkbox"/>
Accessory/Ignition(+)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Dimmer/Illumination (+)	<input type="checkbox"/>
Chassis Ground (-)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Constant power supply	<input type="checkbox"/>



Peel off protection
adhesive of the pin3
wire 4 to expose the
insulated core.

Connect pin3 wire 4 to
camera wire 3.

black cable 2 is
connected to the
backup light "-"

red cable 1 connect
together to the backup
light "+"

Wires color may be different due to various batches, but pin locations will be the same.
You can search Youtube video ID "VWCK1CYwF5s" on Youtube to find our supplied
camera connection video tutorial




For more guidance/video tutorial, please copy this link or scan the QR code to enter into
our official website:

<http://www.fancygod.com>

Instructions



Please confirm whether to use A-Cables or B-Cables according to the shape and pin configuration of the original car's connector (refer to pic 1).

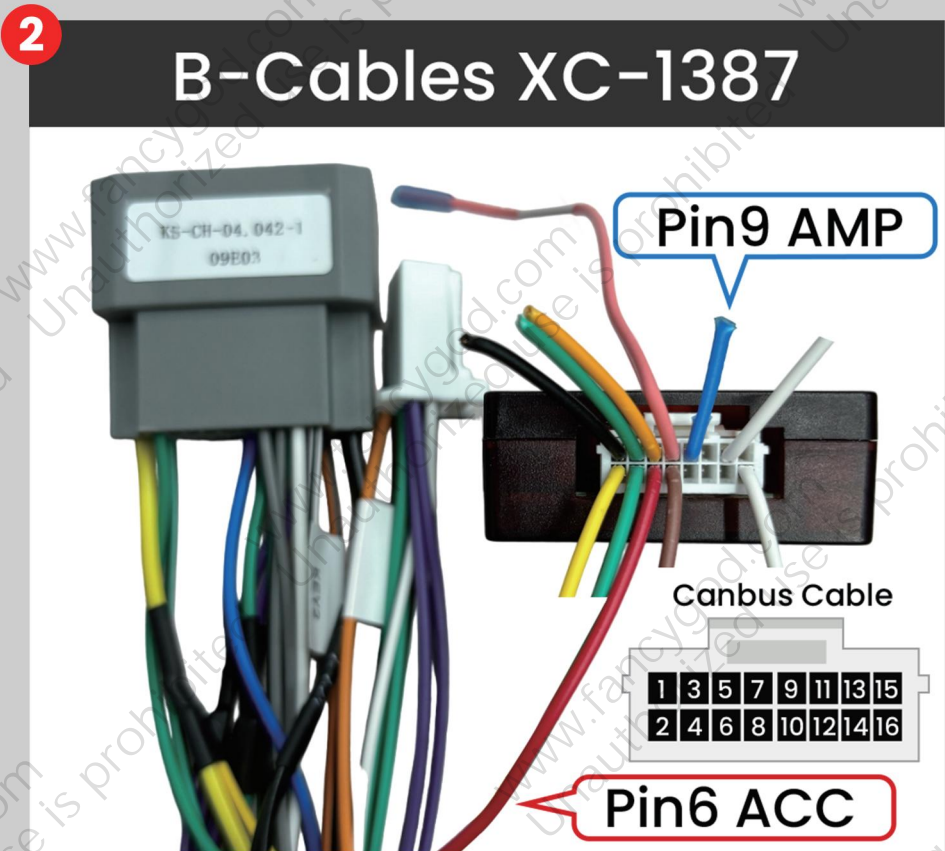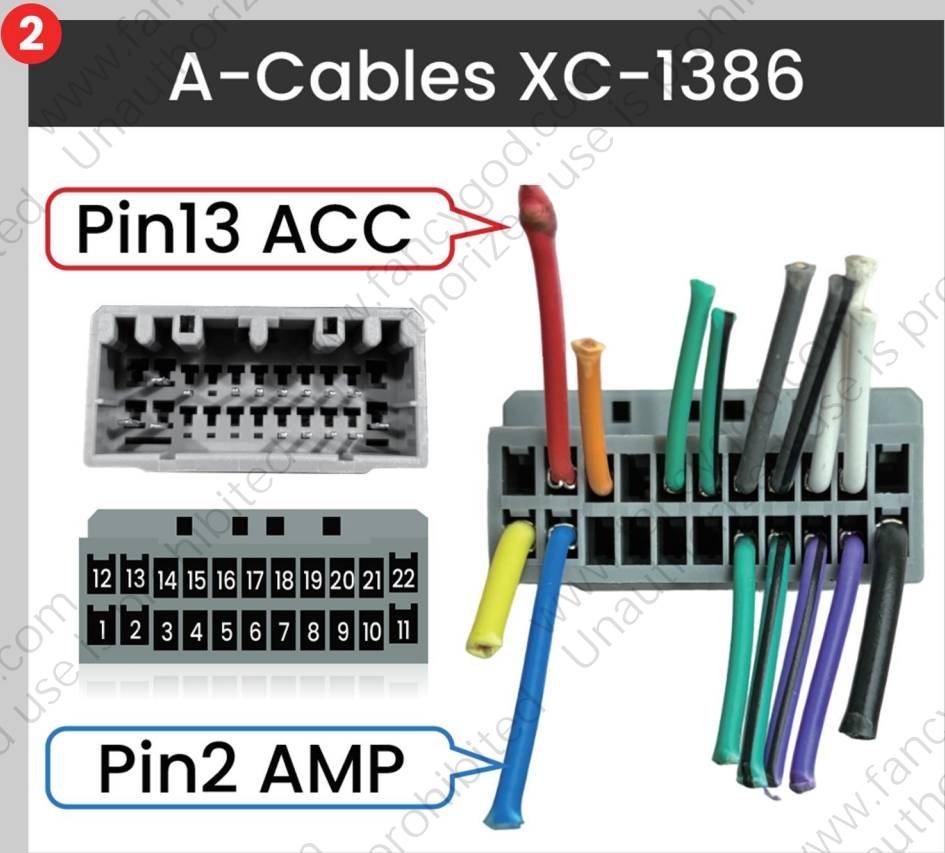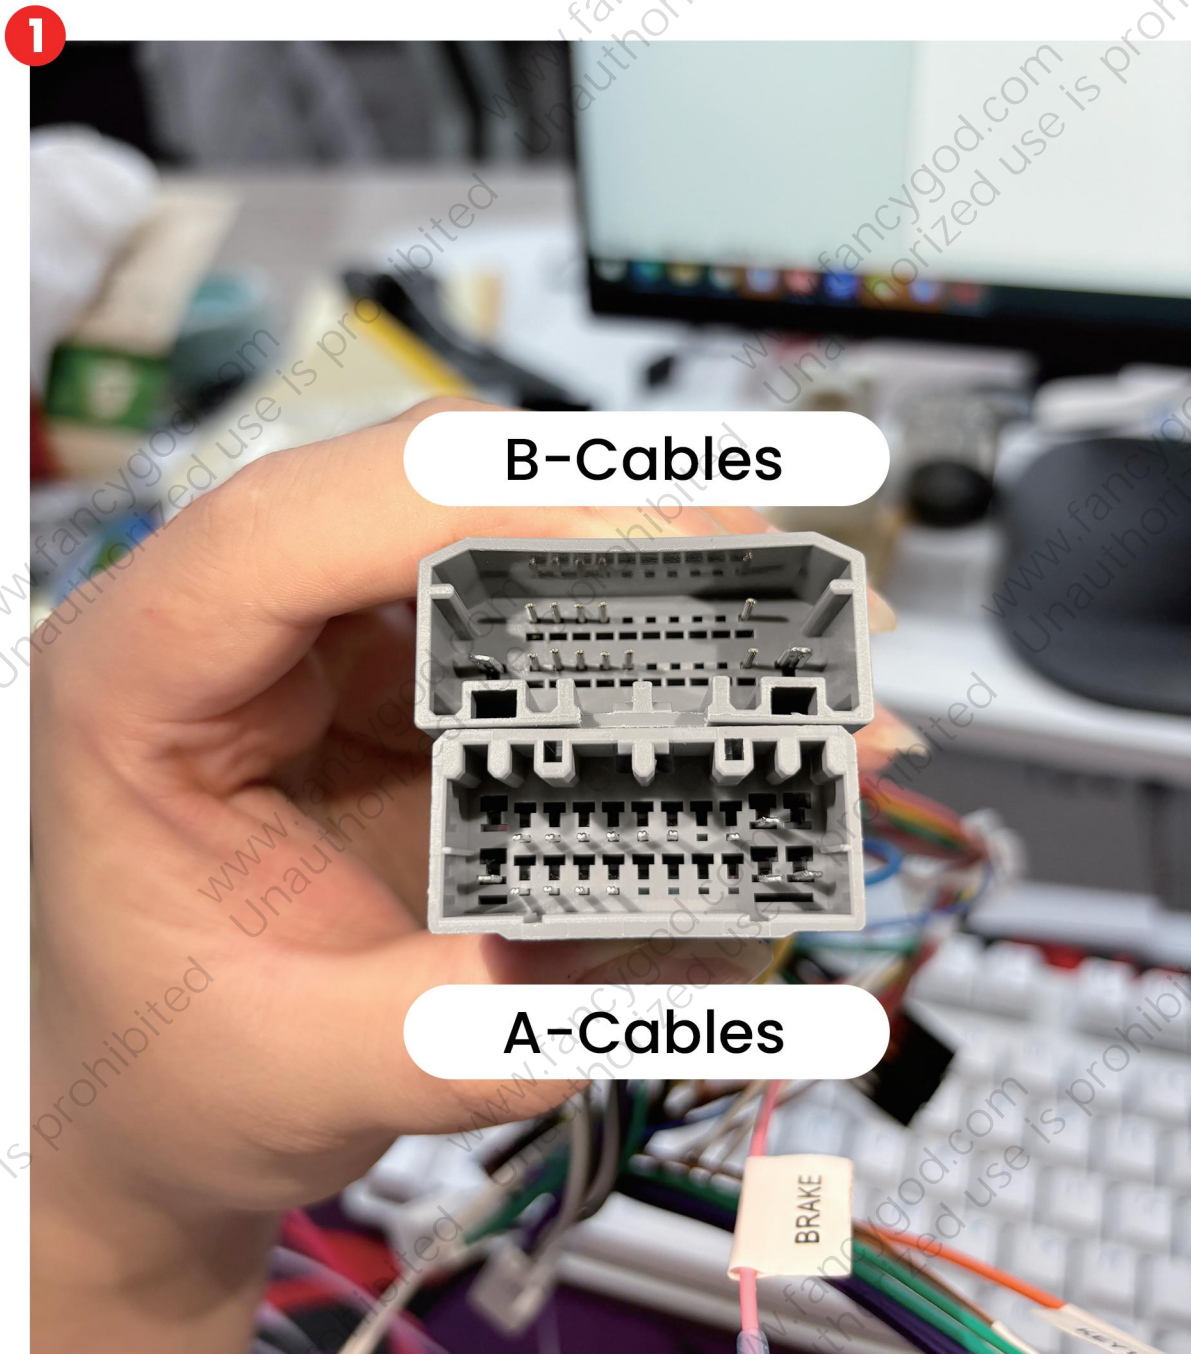

If there is no sound after installation, please manually connect the AMP cable to the ACC cable (refer to pic 2), ensure the connection is correct in order to power on the AMP and make the sound work.

(Note: You can use a lighter to soften and peel off the skin of AMP wire and the ACC wire (instead of cutting it off) then twist the two wires together and wrap them up. Please also use an insulating tape or a clip to protect the conjunction of them.)

Scan the QR code on the right to watch the wiring harness connection video

tutorial:



To prevent issues such as steering wheel controls not functioning, please be sure to follow the setup steps shown below:

Please press Settings-Factory Settings (input password 3368)-Car Model to Choose "XP(Simple) —Jeep—ALL—XP"

If the sound does not work properly after selecting the CAN box type to "XP", please switch the CAN box type to "XP.HIGH.AMP".

