


















## Post-installation rendering



## D-Cables XC-933



Front Left (+)			Rear Right (+)
Front Left (-)			Rear Right (-)
Front Right (+)			Rear Left(+)
Front Right			Rear Left(-)
Steering Wheel Key(+)			Power Antenna(+)
Rear Camera(+)			Steering Wheel Key 2 (+)
Accessory/Ignition(+)			Dimmer/Illumination (+)
Chassis Ground (-)			Constant power supply

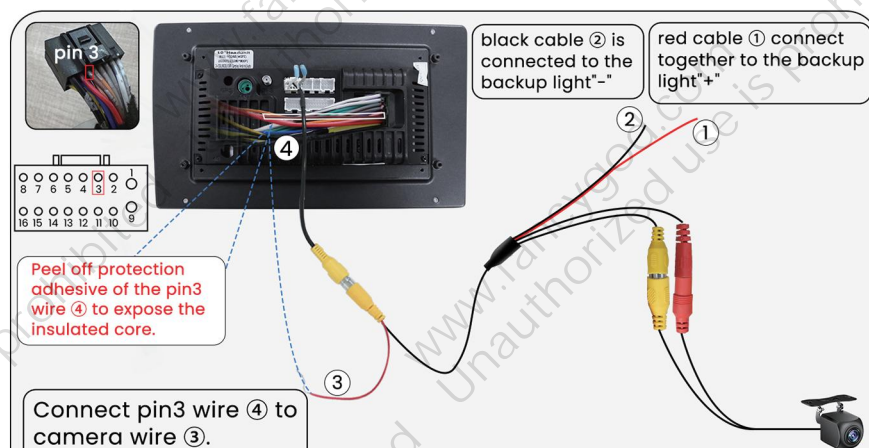


Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWCKlCYwF5s" on Youtube to find our supplied camera connection video tutorial!

## Instructions






Note: Since the D-type cable (XC-933) contains multiple plugs, the required cable varies depending on the factory radio. To avoid issues such as the radio not powering on due to incorrect cable connections, be sure to carefully follow the installation tutorial steps.

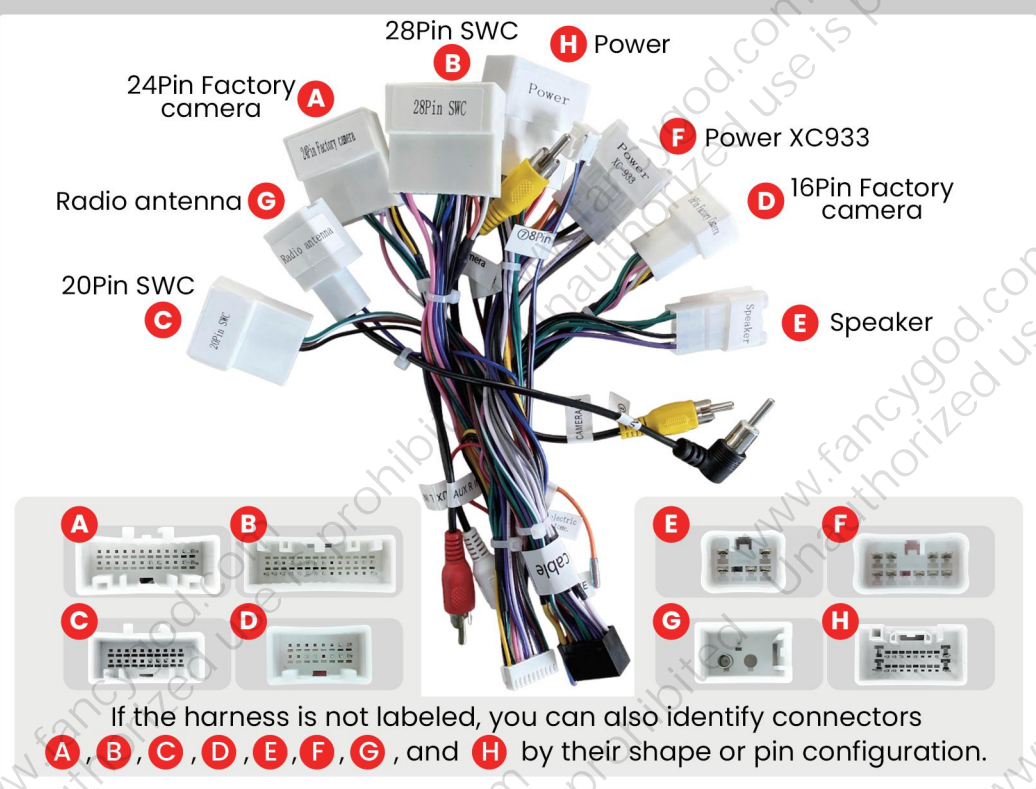

If your factory radio matches Image ①, please use C, F, and E harness from the **D-Cable (XC-933)** (The remaining harness do not need to be connected) to connect with the factory car radio plug, and follow the steps shown in Image ②:

Please press "Settings" → "Factory Settings" (enter the password 3368) → "Car Model," to choose "NULL—OTHER—No Protocol—Null."

If your car has steering wheel control buttons, please follow the instructions in Image ③, open the SWC app on the radio, and manually learn the steering wheel control keys according to the app's instructions.

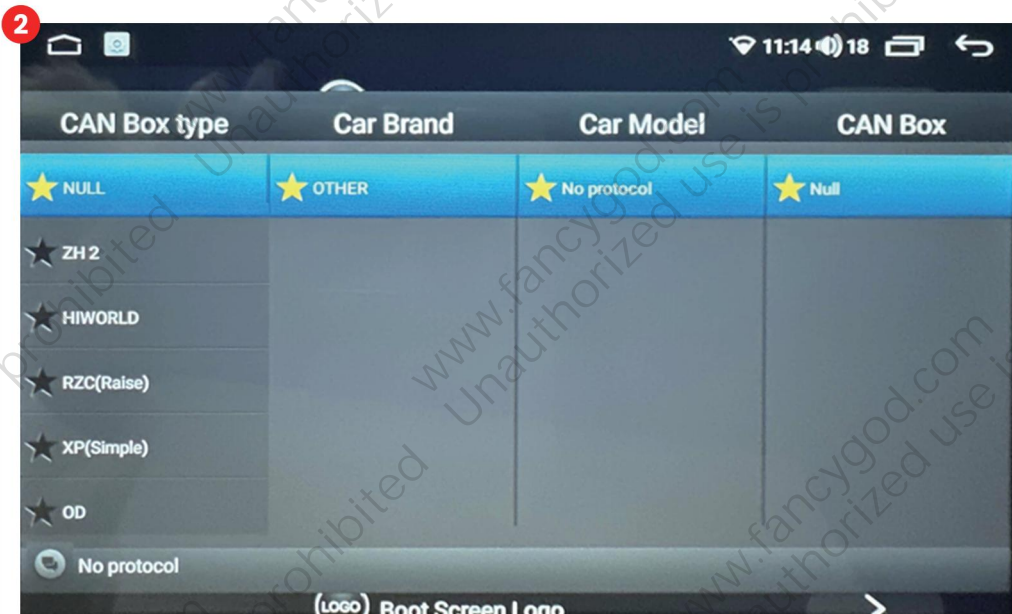

If your factory radio matches Image ④, please use C and H harness from the **D-Cable (XC-933)** (The remaining harness do not need to be connected) to connect with the factory car radio plug, and follow the steps shown in Image ⑤:

Please press "Settings" → "Factory Settings" (enter the password 3368) → "Car Model," and choose "XP(Simple)—Toyota—PRA—DO—2014.LOW."



If your factory radio matches Image ⑥, please use the F, E, A, B, and G harness from the **D-Cable (XC-933)** (The remaining harness do not need to be connected) to connect with the factory car radio plug, and follow the steps shown in Image ⑦:

Please press "Settings" → "Factory Settings" (enter the password 3368) → "Car Model," and choose "XP(Simple)—Toyota—Camry—XP."

