

USE MANUAL

Car Stereo

For Kia Optima K5

2014-2015

Central Control Disassembly
and Operation

Post-installation rendering




Wiring diagram



B-cables XC-741

Connect to the original car harness plug: power/speaker/SWC

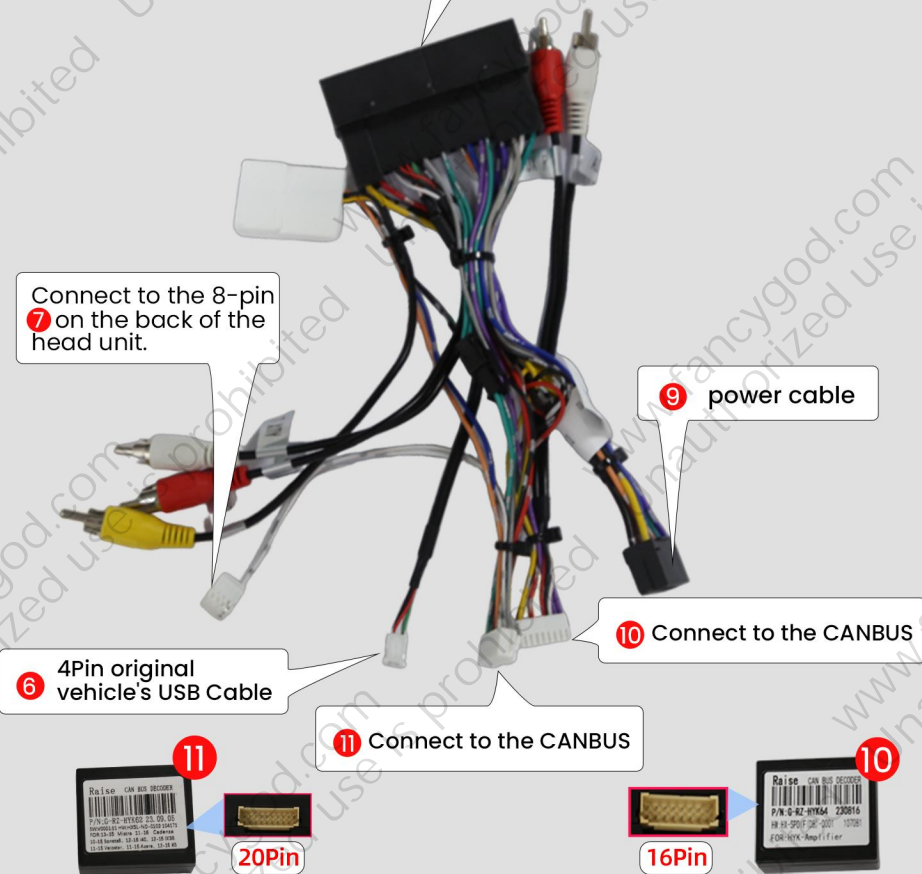


A-cables XC-1120

Connect to the original car harness plug: OEM Camera/Amplifier/Power



Power Line Definition Chart

Front Left (+)			Rear Right (+)
Front Left (-)			Rear Right (-)
Front Right (+)			Rear Left(+)
Front Right (-)			Rear Left(-)
Steering Wheel Key(+)			Power Antenna(+)
Rear Camera(+)			Steering Wheel Key 2 (+)
Accessory/Ignition(+)			Dimmer/Illumination (+)
Chassis Ground (-)			Constant power supply

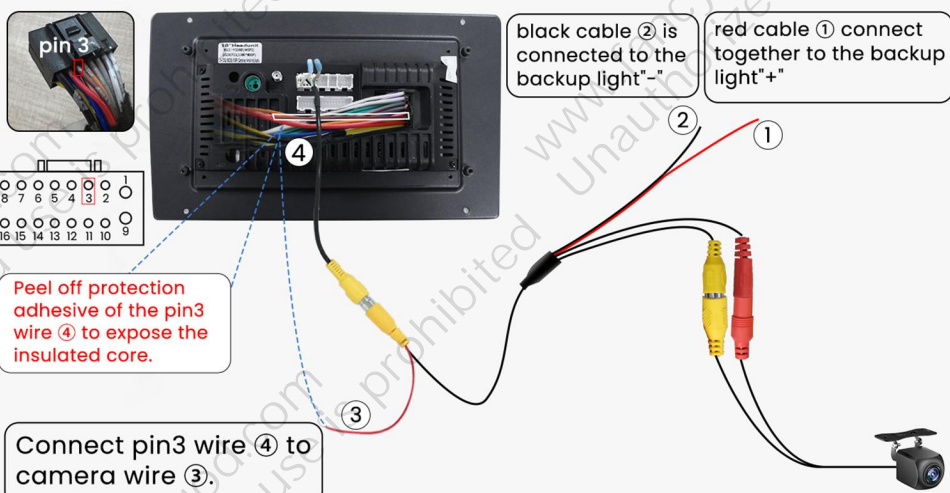


Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWck1CYwF5s" on Youtube to find our supplied camera connection video tutorial


Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.

If you are using **A-cables**, please follow the steps shown in picture 1: Enter Settings → Factory (enter password 3368), then select Car Model and choose “NULL—OTHER—No protocol—Null.”

If your car has steering wheel control buttons, to ensure they work properly, open the SWC app on the radio and follow the app's instructions to manually learn the steering wheel control keys (as shown in picture 2).

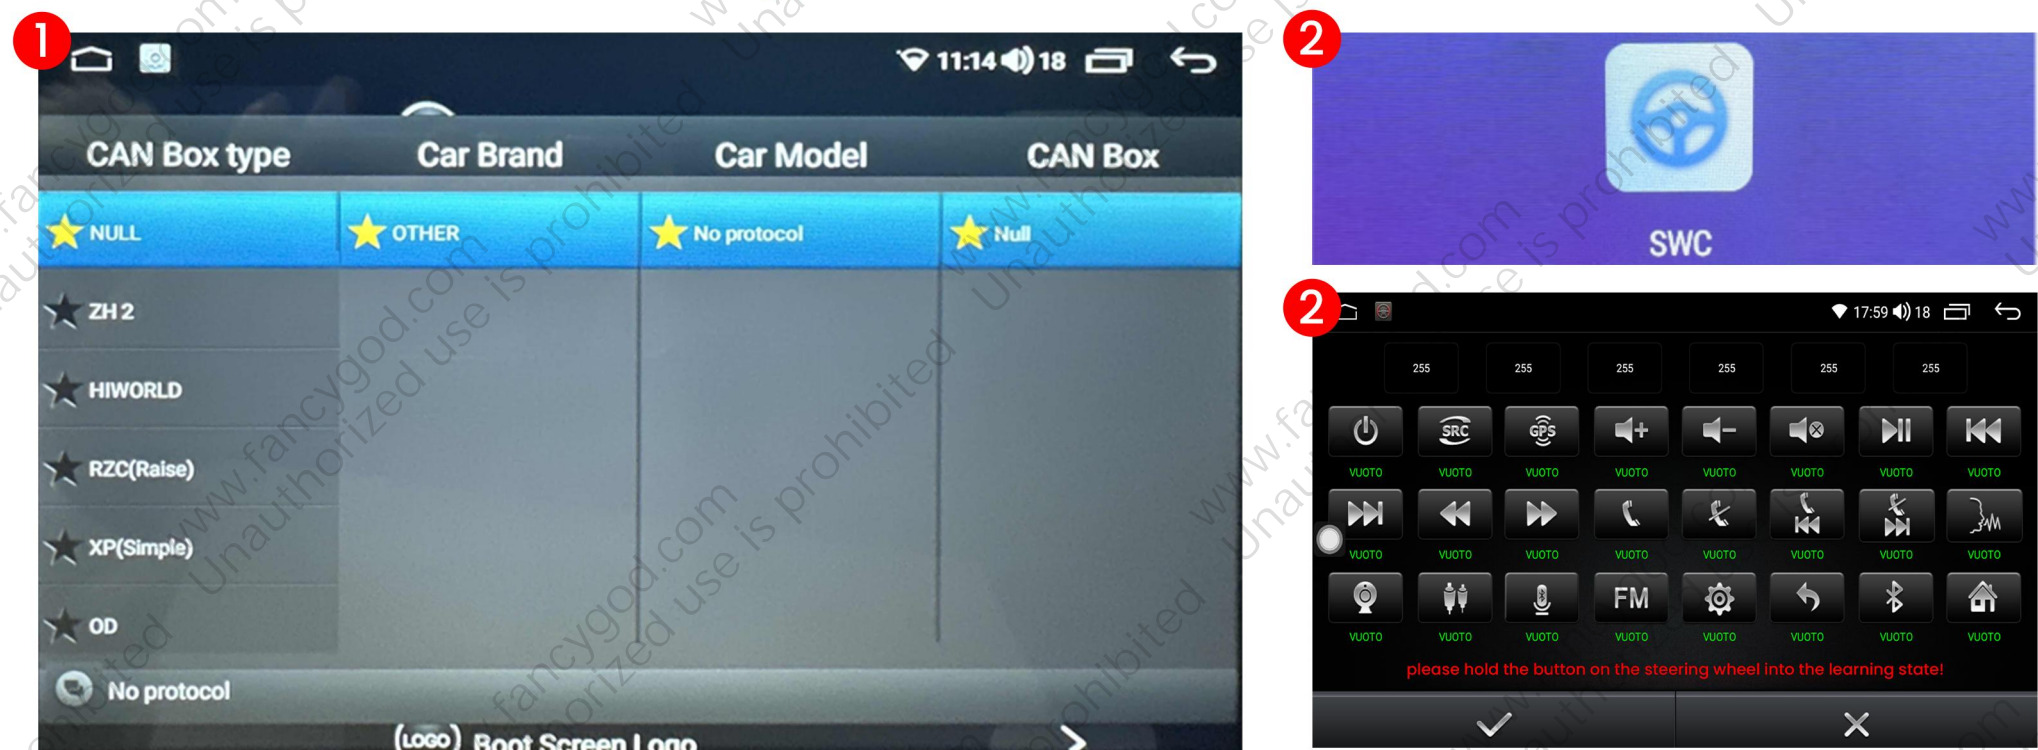

If you are using **B-cables**, to prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please follow the steps shown in Image 3: Press Settings → Factory (input password: 3368) → Car Model, and select “RZC (Raise) — Hyundai/KIA — K5 — 2011-2016.”

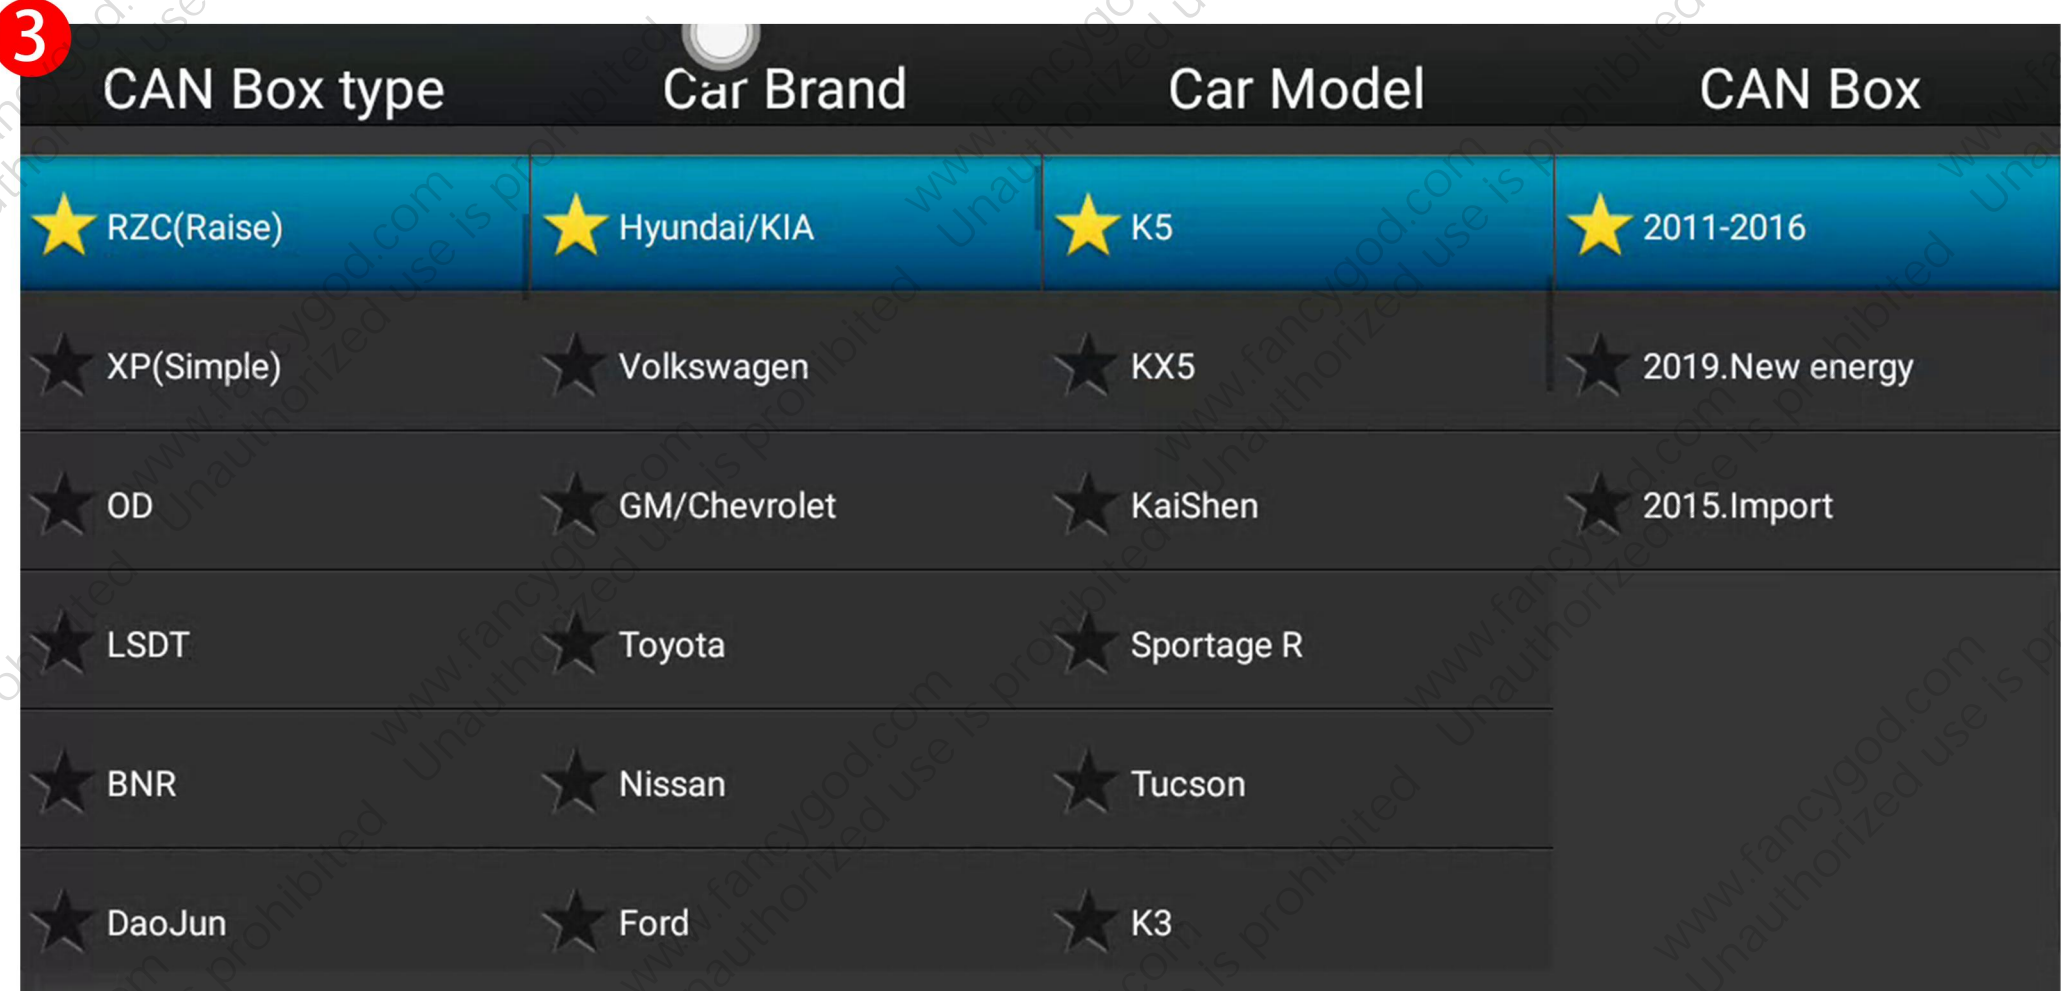

For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:

<http://www.fancygod.com>

Instructions

