USE MANUAL

Car Stereo for Toyota camry 2007-2011

Central Control Disassembly and Operation

Post-installation rendering



Wiring diagram





Connect to the original car harness plug: power/speaker/SWC

Connect to the Rear Camera Signal wire (Retain factory rear camera)

AUX cables

Power Cable

Connect to the CANBUS

E-Cables XC-013

Connect to the original car harness plug: power/speaker/SWC

Power Cable


For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:


Instructions



The barcode is for our warehouse outbound use only and is not relevant for installation.



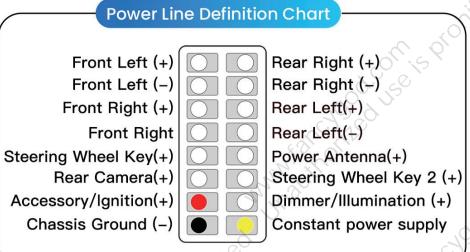

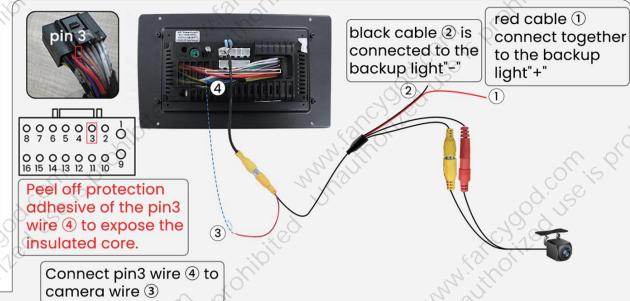

Wires color may be different due to various batches, but pin locations will be the same.
You can search Youtube video ID "VWCklCYwF5s" on Youtube to find our
supplied camera connection video tutorial

If your factory radio matches the one in image 10, use C-Cables.





If your factory radio matches the one in image 2, use E-Cables.



After connecting the cables, please be sure to follow these steps:

According to Image 3, please press "Settings"

- → "Factory Settings" (enter password 3368)
- → "Car Model," to choose "NULL—OTHER— No Protocol—Null."

If your car has steering wheel control buttons, according to Image 4, please open the SWC app on the radio and refer to the app's instructions to manually learn the steering wheel control keys.







FCC warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not causeharmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.