Manual
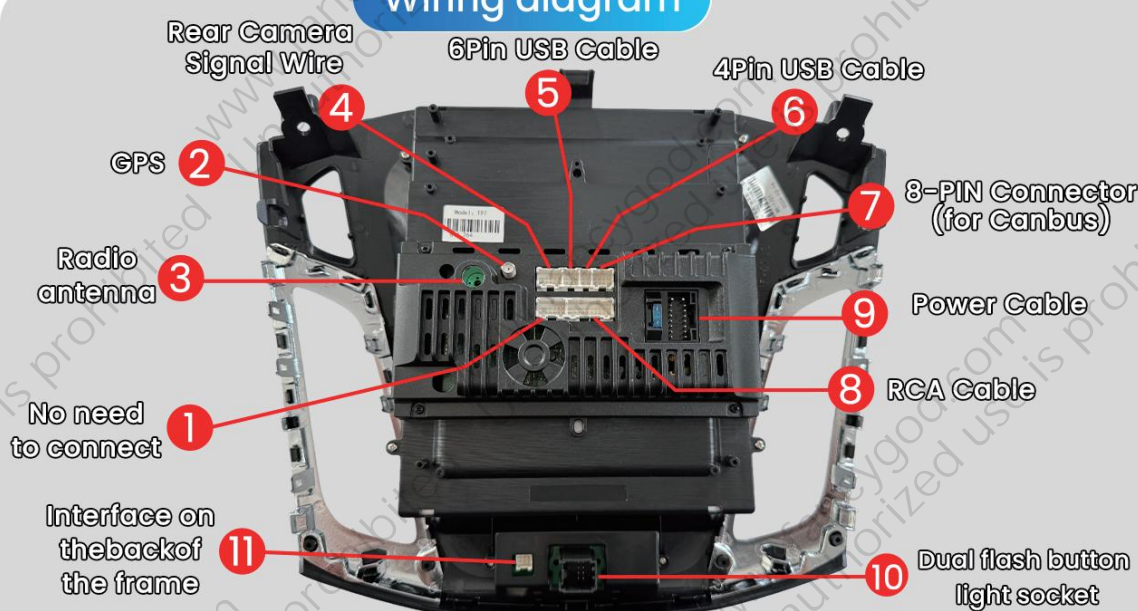
2012-2018 Ford Focus

Central Control Disassembly and Operation

Post-installation rendering

Wiring diagram

- Rear Camera Signal Wire — 4
- 6Pin USB Cable — 5
- 4Pin USB Cable — 6
- GPS — 2
- 8-PIN Connector (for Canbus) — 7
- Radio antenna — 3
- Power Cable — 9
- No need to connect — 1
- RCA Cable — 8
- Interface on the back of the frame — 11
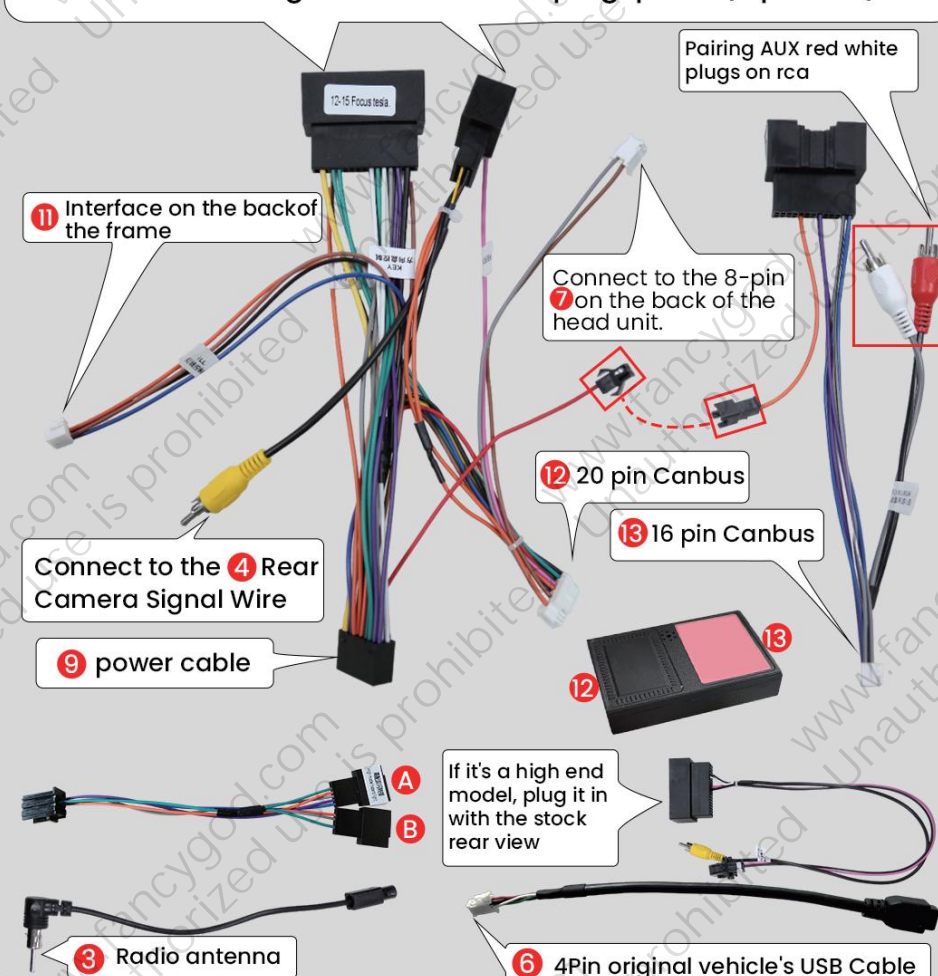- Dual flash button light socket — 10

MIND the connector clip direction (clips end facing down).

Original Vehicle Wiring Diagram

Connect to the original car harness plug: power/speaker/SWC

Pairing AUX red white plugs on rca

11 Interface on the back of the frame

Connect to the 8-pin 7 on the back of the head unit.

Connect to the 4 Rear Camera Signal Wire

9 power cable

12 20 pin Canbus

13 16 pin Canbus

If it's a high end model, plug it in with the stock rear view

3 Radio antenna

6 4Pin original vehicle's USB Cable

Power Line Definition Chart

Front Left (+)	○	○	Rear Right (+)	
Front Left (–)	○	○	Rear Right (–)	
Front Right (+)	○	○	Rear Left(+)	
Front Right	○	○	Rear Left(–)	
Steering Wheel Key(+)	○	○	Power Antenna(+)	
Rear Camera(+)	○	○	Steering Wheel Key 2 (+)	
Accessory/Ignition(+)	●	○	Dimmer/Illumination (+)	
Chassis Ground (–)	●	●	Constant power supply	

For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:
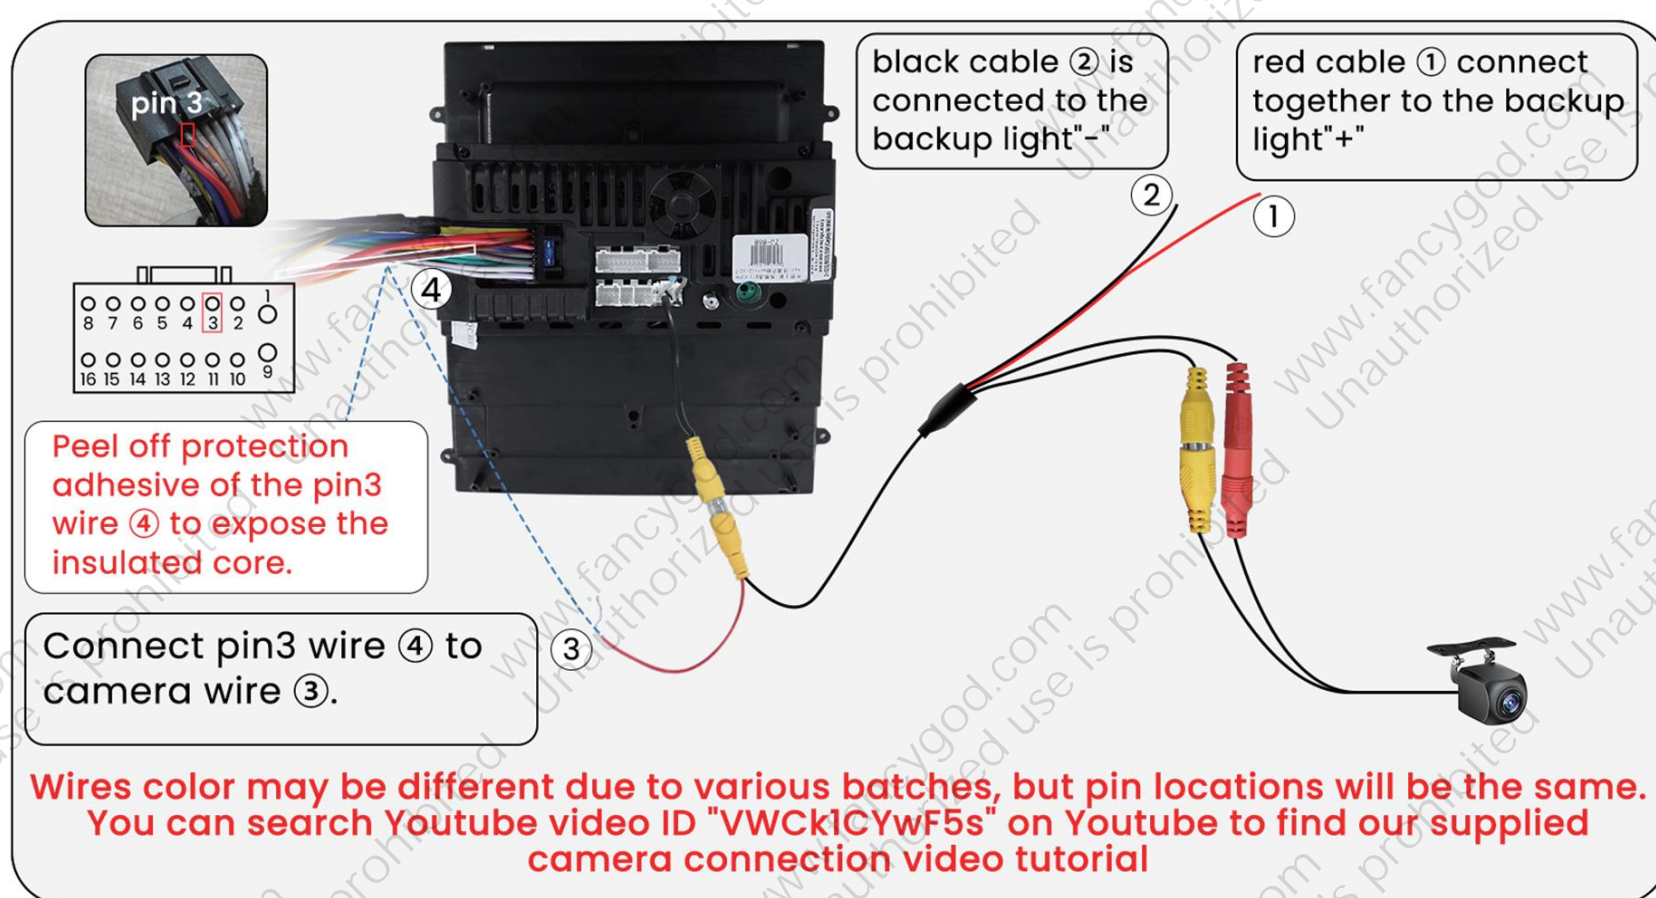
http://www.fancygod.com

Instructions

The barcode is for our warehouse outbound use only and is not relevant for installation.

pin 3

black cable ② is connected to the backup light"-"

red cable ① connect together to the backup light"+"

② ①

④

Peel off protection adhesive of the pin3 wire ④ to expose the insulated core.

Connect pin3 wire ④ to camera wire ③.

③

Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWCk1CYwF5s" on Youtube to find our supplied camera connection video tutorial

A "High model hazard light"

B (with no label).

If your hazard light and unlock door button are together(as shown in pic①), Please use the plug-A with the label name "High model hazard light"

1

If your OEM center console only has a hazard light button(as shown in pic②), please use the plug-B(with no label).

2

To prevent issues like the steering wheel controls not working,please be sure to follow the setup steps(as shown in pic③):

Please press Settings-Factory Settings (inputpassword 3368)—Car Model to Choose "RZC(Raise) —Ford—Focus—Ford.ALL"

3

		14:22 ◀))18	
Original Car Agreement			>
Car Model		ord.ALL-FordFocus	>
CAN Box type	Car Brand	Car Model	CAN Box
⭐ RZC(Raise)	⭐ Ford	⭐ Focus	⭐ Ford.ALL
⭐ CYT	⭐ Honda	⭐ Mondeo	⭐ 2005-2018.keep
⭐ XFY	⭐ Toyota	⭐ EDGE	
⭐ LSDT	⭐ Nissan	⭐ Ecosport	
⭐ DaoJun	⭐ BESTURN	⭐ Everest	
⭐ XBS	⭐ Cadillac	⭐ Navigator	
Focus			
Panel Key learning			>

A/C   ❄ 0

HOME   0.0℃   18   0.0℃   BACK