USE MANUAL

Car Stereo for Honda Odyssey 2005-2010

Central Control Disassembly and Operation

Post-installation rendering




Wiring diagram No need Rear Camera 6Pin USB 4Pin USB to connect Signal Wire RCA Cable Radio antenna Power Cable **GPS**





A-cables XC-485

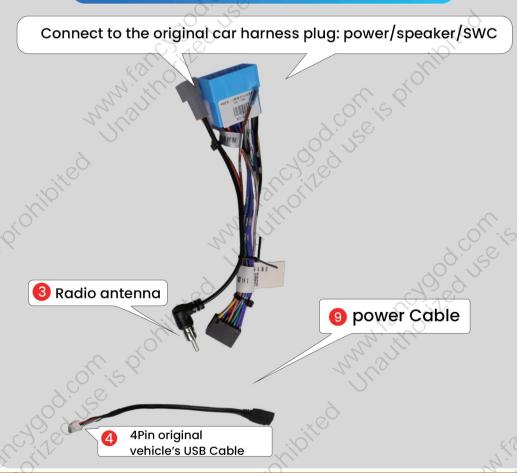


B-cables XC-1396

Connect the to original car harness plug: power/speaker/SWC



Power Line Definition Chart

Front Left (+) Rear Right (+) Rear Right (-) Front Left (-) Front Right (+) Rear Left(+) Rear Left(_) Front Right Steering Wheel Key(+) Power Antenna(+) Rear Camera(+) Steering Wheel Key 2 (+) Accessory/Ignition(+) Dimmer/Illumination (+) Chassis Ground (-) Constant power supply

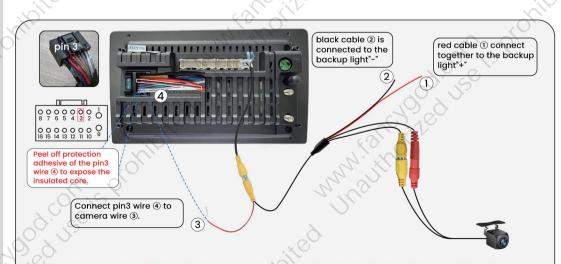

Wires color may be different due to various batches, but pin locations will be the same.

You can search Youtube video ID "VWCkICYWF5s" on Youtube to find our supplied camera connection video tutorial

For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:



Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.


If there's no sound from the radio after connecting the **B-cables**, please connect these two plugs as shown in the picture below.



Please be sure to follow the steps shown in pic (1); Enter Settings → Factory (input password 3368) → Car Model to choose "NULL—OTHER — No protocol — Null."

If your car has steering wheel control buttons, to prevent the steering wheel controls not working properly, please open the SWC app on the radio and refer to the app's instruction to manual learn the steering wheel control keys accordingly (as shown in pic 2).



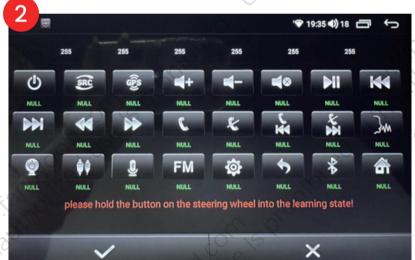



FAQ

Q: How to use wireless Apple CarPlay?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Open the Carlink 2.0 App on the car radio to activate Carplay. (Scan the QR code on the right to view the video tutorial)



Q: How to use wireless Android auto?

- 1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
- 2. Download the Android Auto APP at your phone's Play store first (Confirm the phone can support Android Auto).
- 3. Open the Carlink 2.0 App on the car radio to activate Android Auto. (Scan the QR code on the right to view the video tutorial)

