

USE MANUAL

Car Stereo



for Dodge Ram 1500 2500 3500
2013-2018

Central Control Disassembly and Operation

Post-installation rendering




Wiring diagram

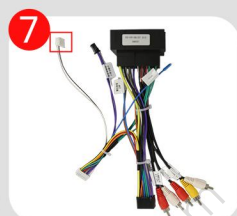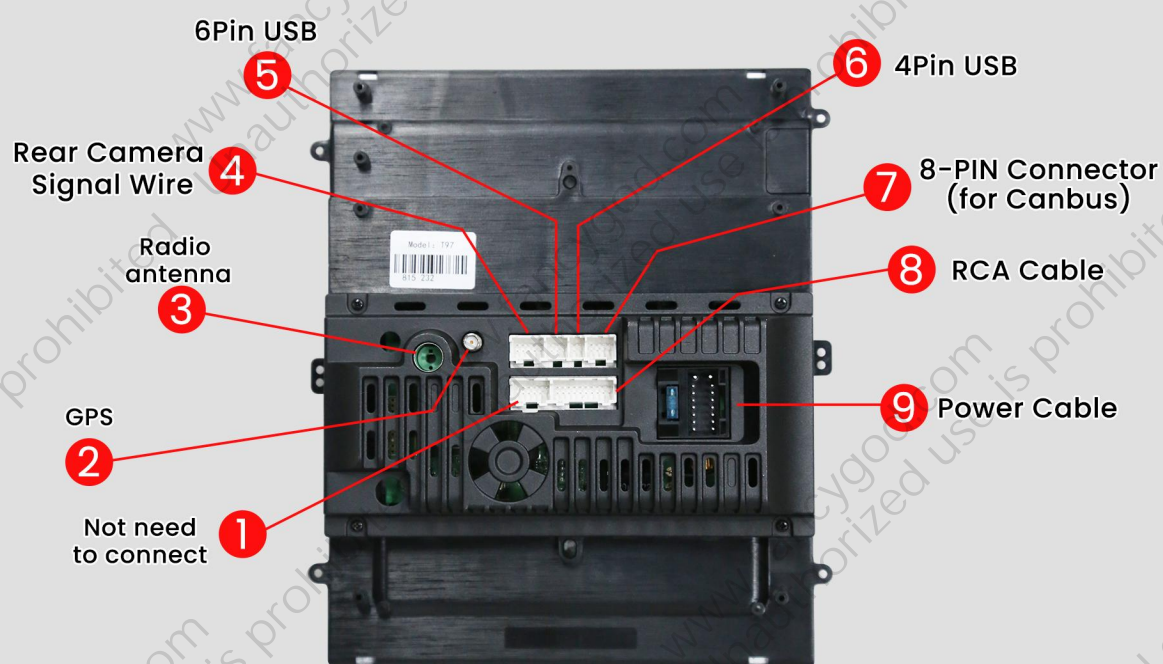


Original Vehicle Wiring Diagram

Connect the original car harness plug: power/speaker/SWC

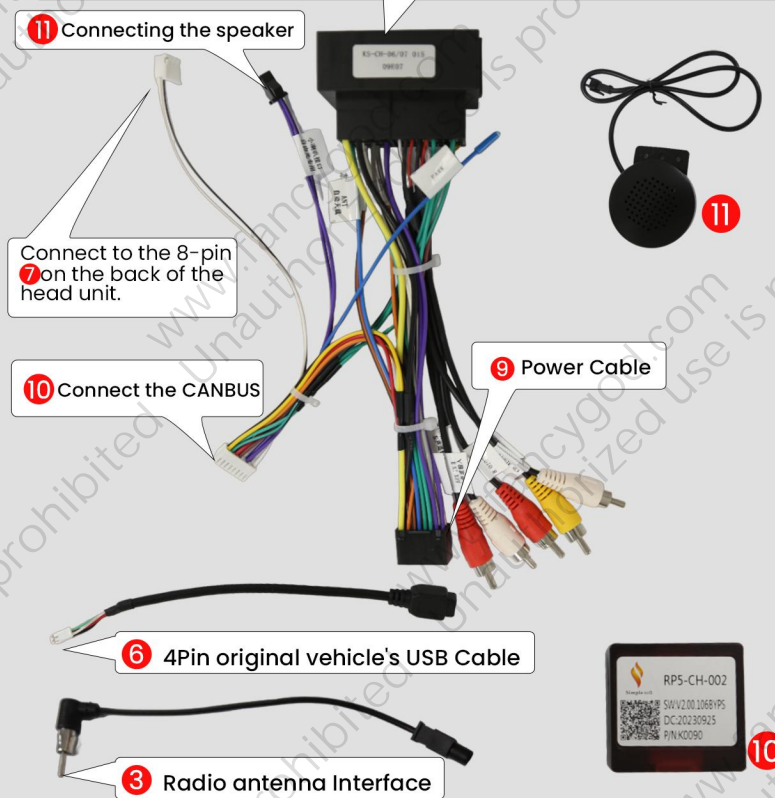

Power Line Definition Chart

Front Left (+)			Rear Right (+)
Front Left (-)			Rear Right (-)
Front Right (+)			Rear Left(+)
Front Right (-)			Rear Left(-)
Steering Wheel Key(+)			Power Antenna(+)
Rear Camera(+)			Steering Wheel Key 2 (+)
Accessory/ignition(+)			Dimmer/Illumination (+)
Chassis Ground (-)			Constant power supply

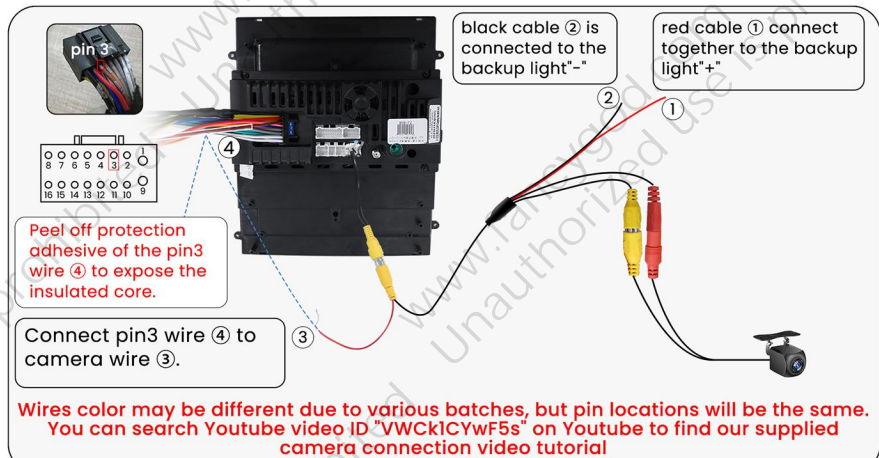

For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:

<http://www.fancygod.com>


Instructions



Manual air conditioning base model is shown below:




Please connect the appropriate interface according to the type of the factory car's air conditioning, as shown in the diagram.

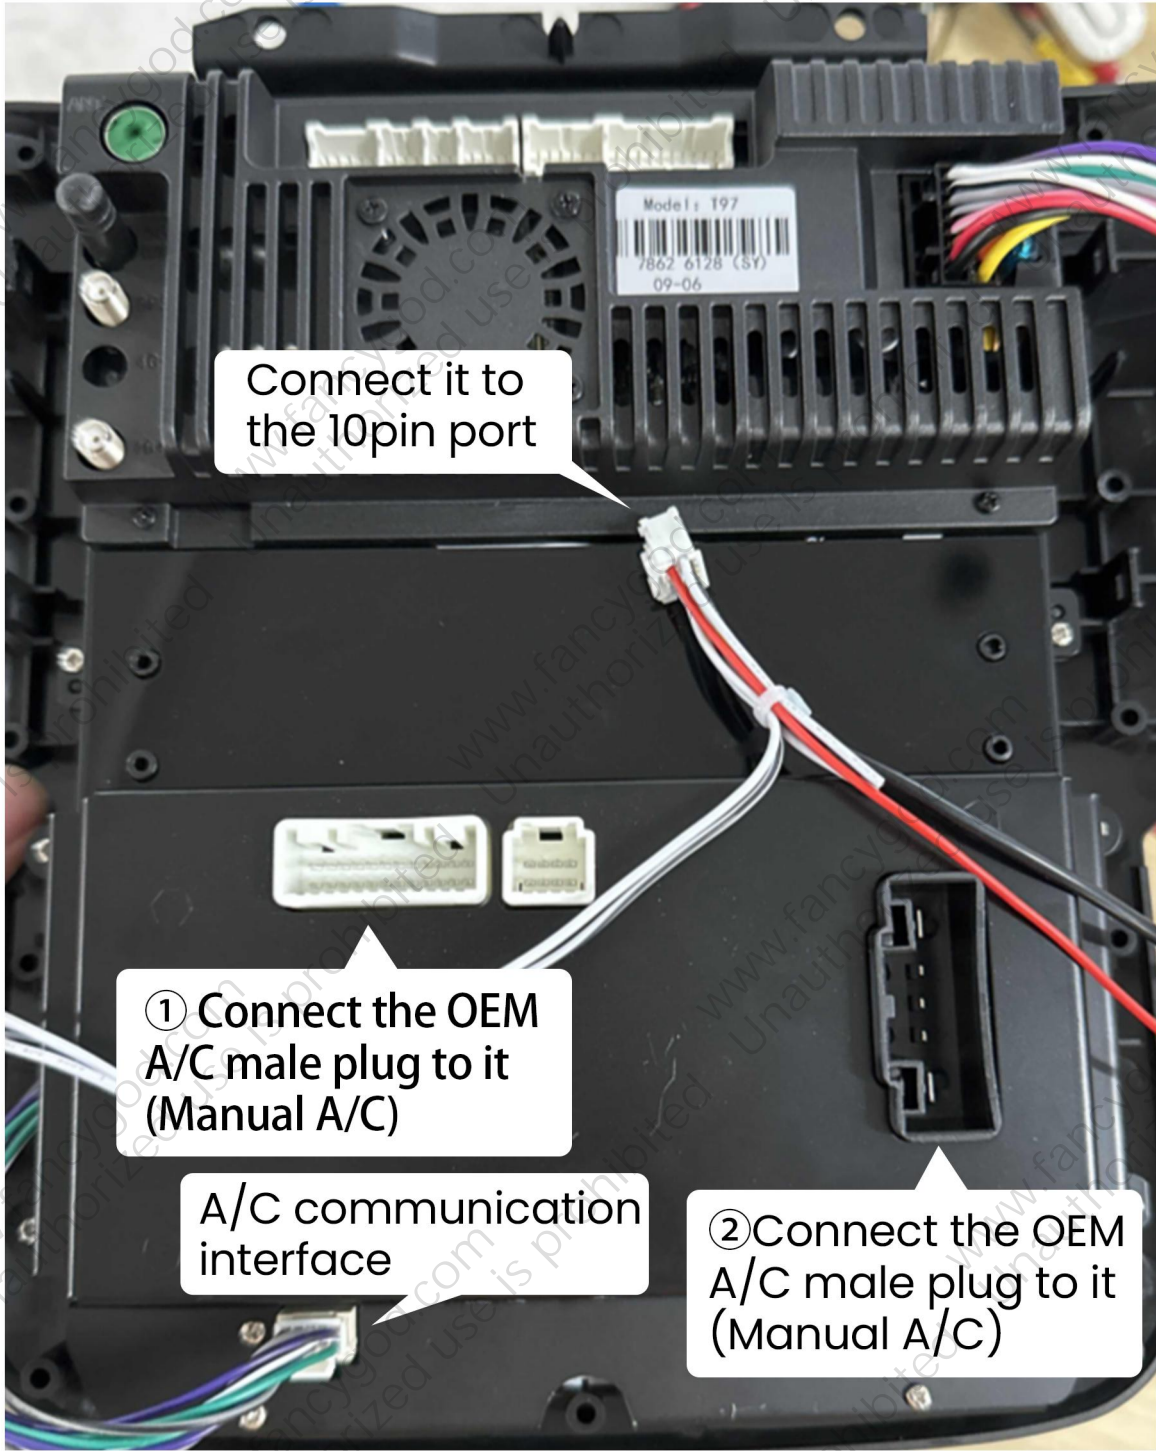

Wiring Diagram for Manual air conditioning:



Please Note: If the air conditioning is not working, please use 10pin rear camera signal wire (with air conditioning communication) as shown in picture ①.

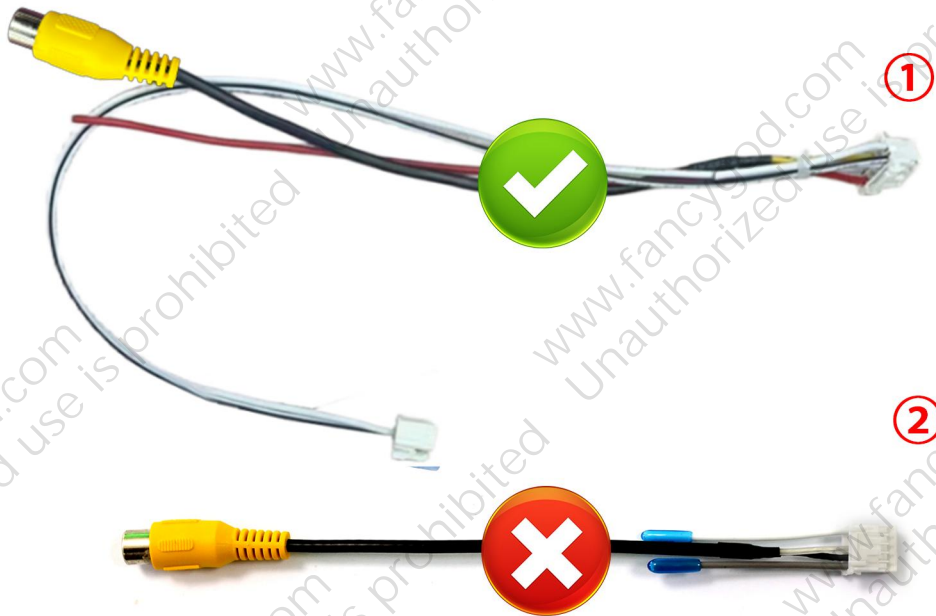

Pic①: 10pin rear camera signal wire (with air conditioning communication)

Pic②: common 10pin rear camera signal wire

To prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please be sure to follow the steps shown in Image ③ :

Please press Settings—Factory(input password 3368)—Car Model, and select“XP (Simple) — Dodge — RAM — XP.CYT Air.Low”

