# **USE MANUAL**

Car Stereo

for Hyundai Sonata 2011-2014

**Central Control Disassembly and Operation** 

Post-installation rendering




# Wiring diagram



# **B-cables XC-741**

Connect to the original car harness plug: power/speaker/SWC

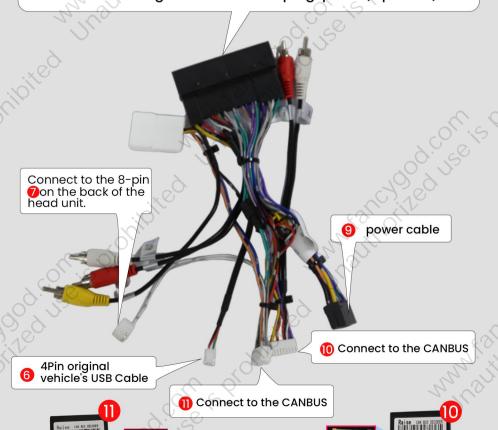

16Pin

20Pin


# A-cables XC-1120

Connect to the original car harness plug: OEM Camera/Amplifier/Power



#### **Power Line Definition Chart**

Front Left (+) Rear Right (+) Front Left (-) Rear Right (-) Front Right (+) Rear Left(+) Front Right Rear Left(-) Power Antenna(+) Steering Wheel Key(+) Steering Wheel Key 2 (+) Rear Camera(+) Accessory/Ignition(+) Dimmer/Illumination (+) Chassis Ground (-) Constant power supply

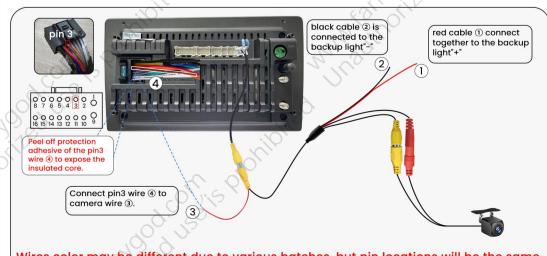

Wires color may be different due to various batches, but pin locations will be the same.
You can search Youtube video ID "VWCk1CYwF5s" on Youtube to find our supplied
camera connection video tutorial

Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.


If you are using A-cables, please follow the steps shown in picture 1: Enter Settings → Factory (enter password 3368), then select Car Model and choose "NULL—OTHER—No protocol—Null."

If your car has steering wheel control buttons, to ensure they work properly, open the SWC app on the radio and follow the app's instructions to manually learn the steering wheel control keys (as shown in picture 2).





If you are using **B-cables**, to prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please follow the steps shown in Image **③**: Press Settings → Factory (input password: 3368) → Car Model, and select "RZC(Raise) — Hyundai/KIA — Sonata8 — 2010-2015."

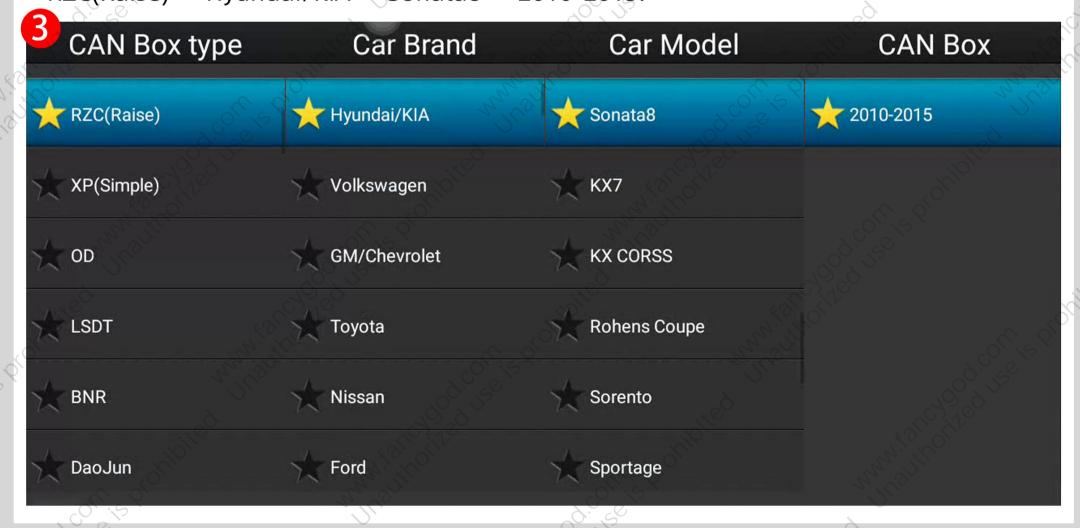

For more guidence/video tutorial, please copy this link or scan the QR code to enter into our official website:

