


USE MANUAL


Car Stereo radio for Chevrolet GMC 2007-2013

Central Control Disassembly and Operation

Post-installation rendering

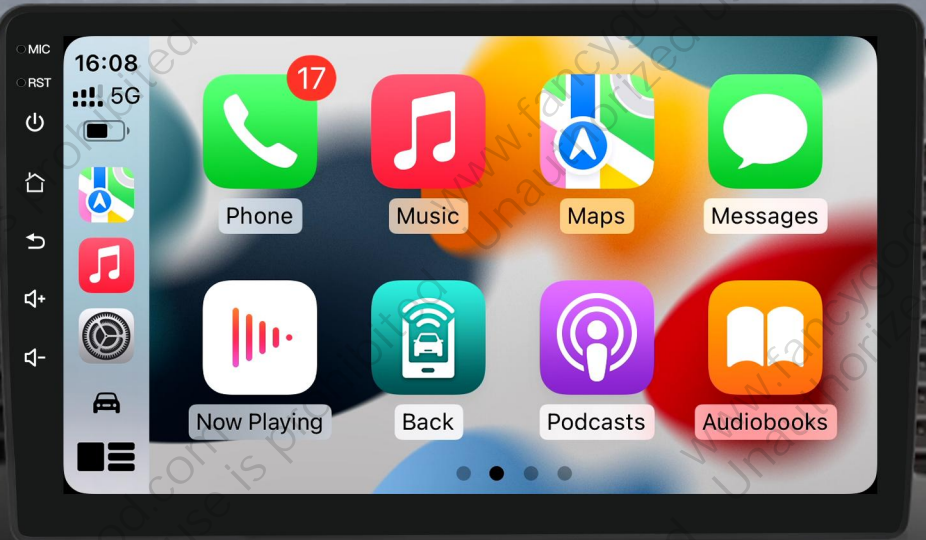


Wiring diagram

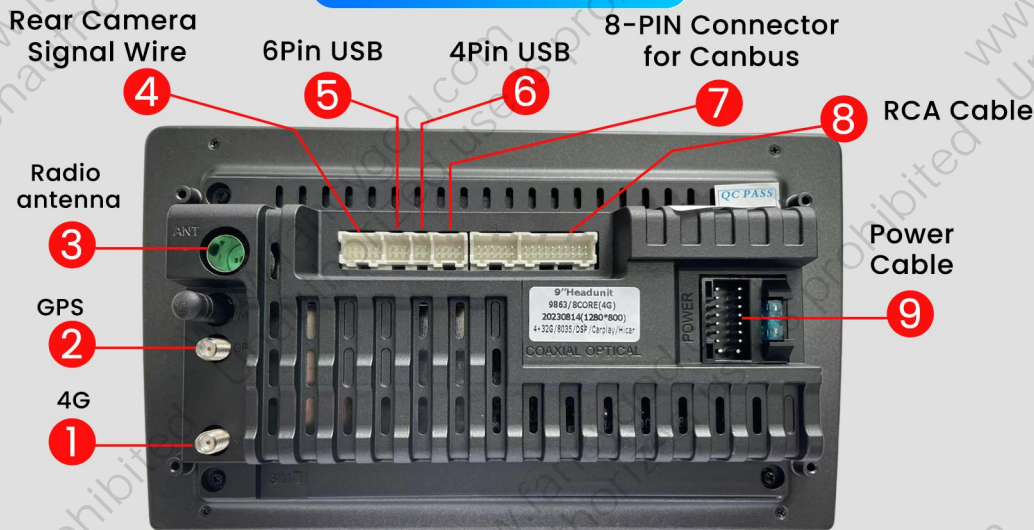

A-cables XC-1463


Connect the original car harness plug: power/speaker/SWC

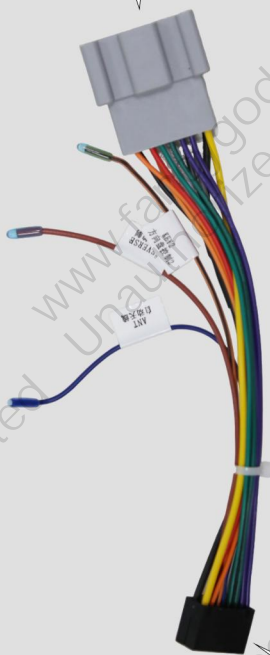

Power Cable



B-cables XC-047

Connect the original car harness plug: power/speaker/SWC

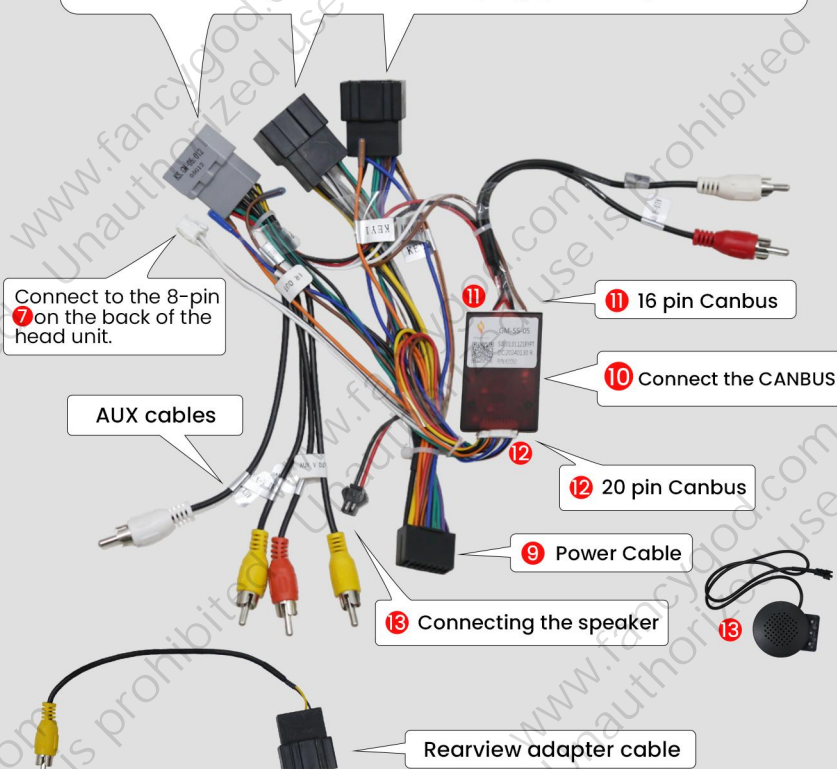

Power Line Definition Chart

Front Left (+)			Rear Right (+)
Front Left (-)			Rear Right (-)
Front Right (+)			Rear Left(+)
Front Right			Rear Left(-)
Steering Wheel Key(+)			Power Antenna(+)
Rear Camera(+)			Steering Wheel Key 2 (+)
Accessory/Ignition(+)			Dimmer/Illumination (+)
Chassis Ground (-)			Constant power supply

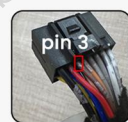

Peel off protection adhesive of the pin3 wire ④ to expose the insulated core.

Connect pin3 wire ④ to camera wire ③.

black cable ② is connected to the backup light“-”

red cable ① connect together to the backup light“+”

Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWck1CYwF5s" on Youtube to find our supplied camera connection video tutorial

For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:

<http://www.fancygod.com>

Instructions



Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.


If you are using **A-cables**, please follow the steps shown in picture **1** : Enter Settings → Factory (enter password 3368), then select Car Model and choose “NULL—OTHER—No protocol—Null.”

If your car has steering wheel control buttons, to ensure they work properly, open the SWC app on the radio and follow the app's instructions to manually learn the steering wheel control keys (as shown in picture **2**).



If you are using **B-cables**, to prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please follow the steps shown in Image **3** :

Press Settings → Factory (input password: 3368) → Car Model, and select “XP (Simple) — GM/Chevrolet — ALL— XP(L).”

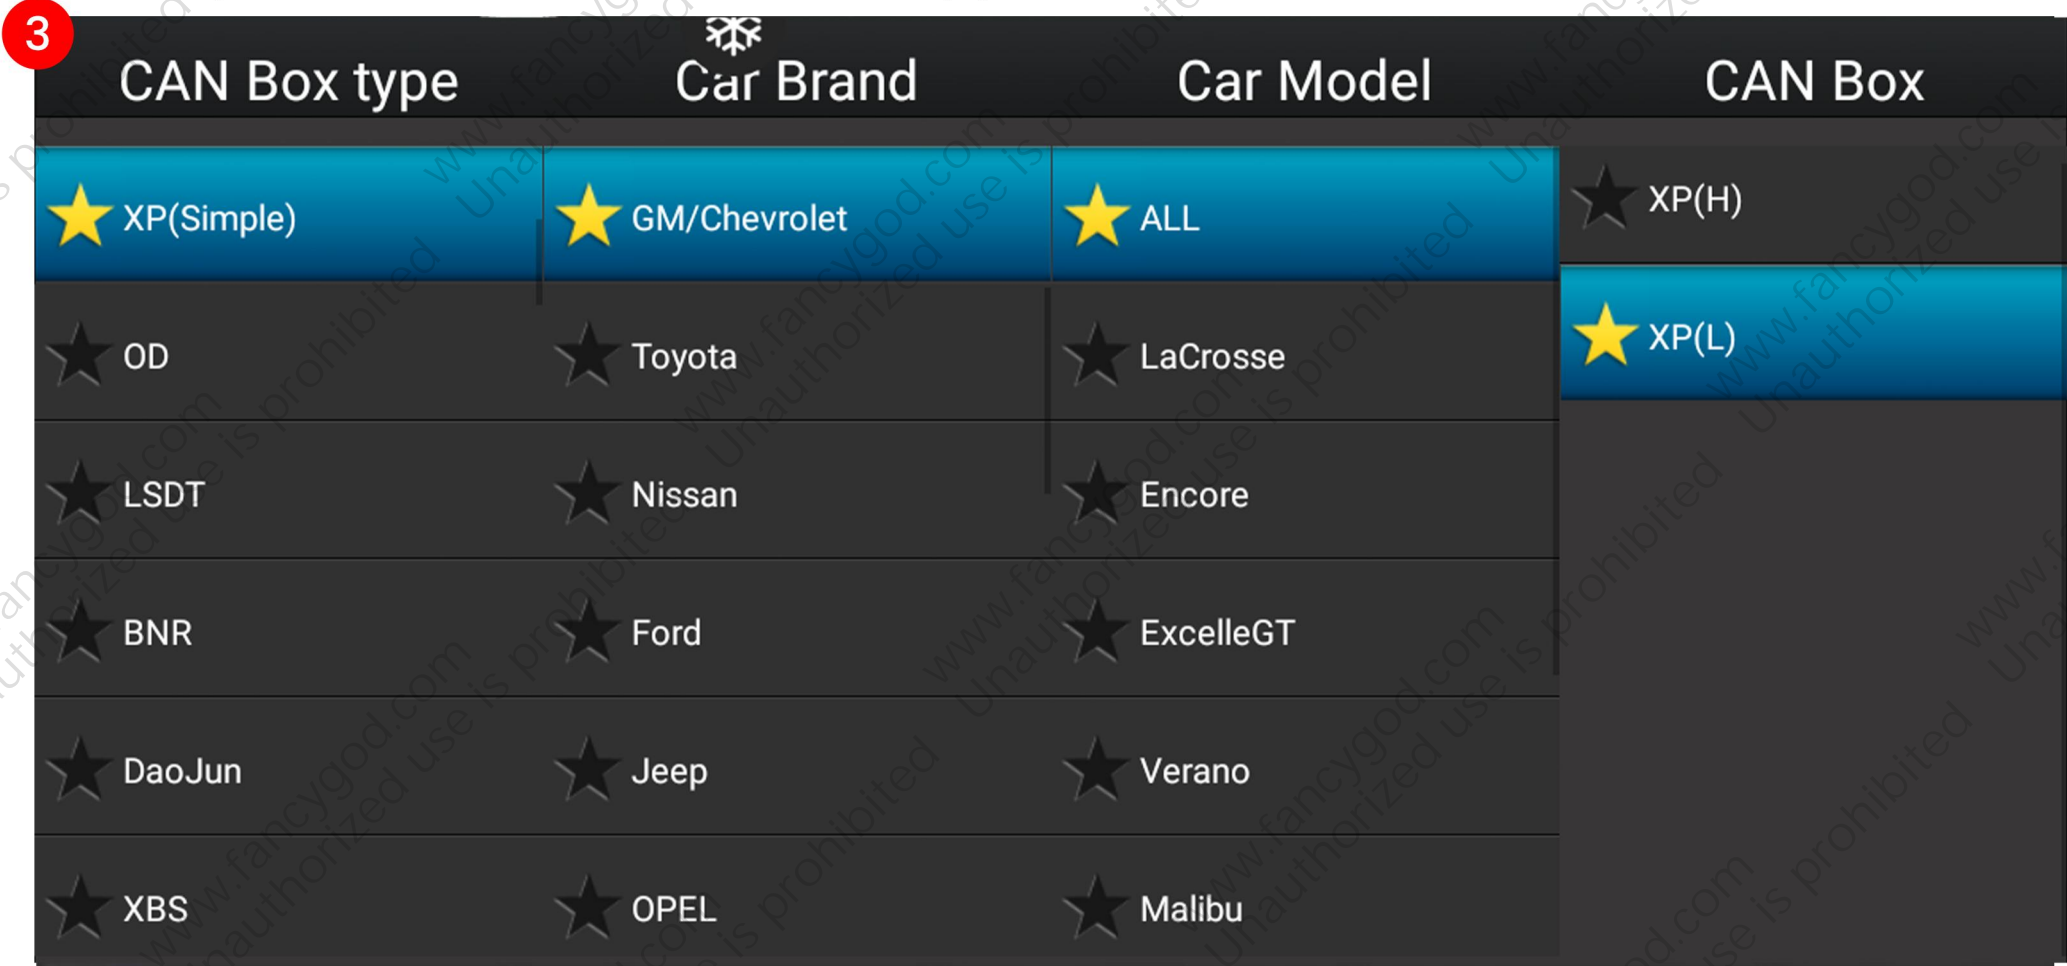

FAQ

Q: How to use wireless Apple CarPlay?

1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
2. Open the Carlink 2.0 App on the car radio to activate Carplay. (Scan the QR code on the right to view the video tutorial)



Q: How to use wireless Android auto?

1. Turn on Bluetooth app on the radio and connect to your phone's bluetooth (password: 0000).
2. Download the Android Auto APP at your phone's Play store first (Confirm the phone can support Android Auto).
3. Open the Carlink 2.0 App on the car radio to activate Android Auto. (Scan the QR code on the right to view the video tutorial)

