USE MANUAL

Car Stereo
for Chevy Spark
2013 -2015

Central Control Disassembly and Operation

Post-installation rendering

17:38 4G
Phone Music Maps Messages
Now Playing Back Podcasts Audiobooks

Wiring diagram

6Pin USB Cable
8-PIN Connector for canbus
Rear Camera Signal Wire
4Pin USB Cable
RCA Cable
GPS
Radio antenna
Power Cable
Not need to connect

- ② GPS
- ③ Radio antenna
- ① Not need to connect

③
④
⑤
⑥ or
⑦
⑧
⑨
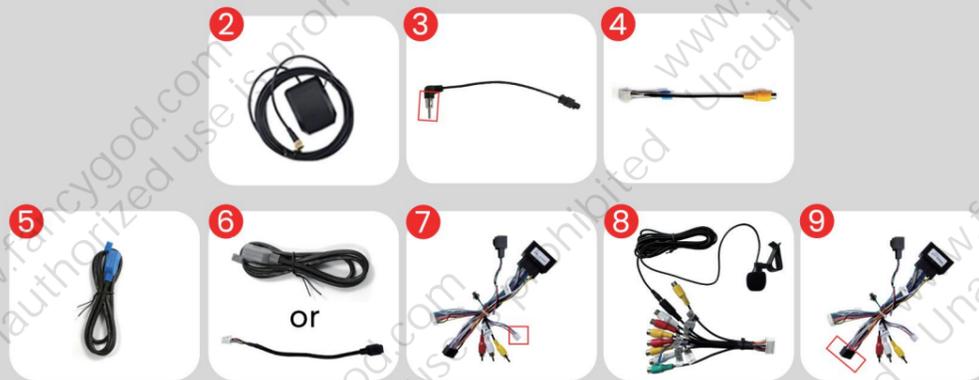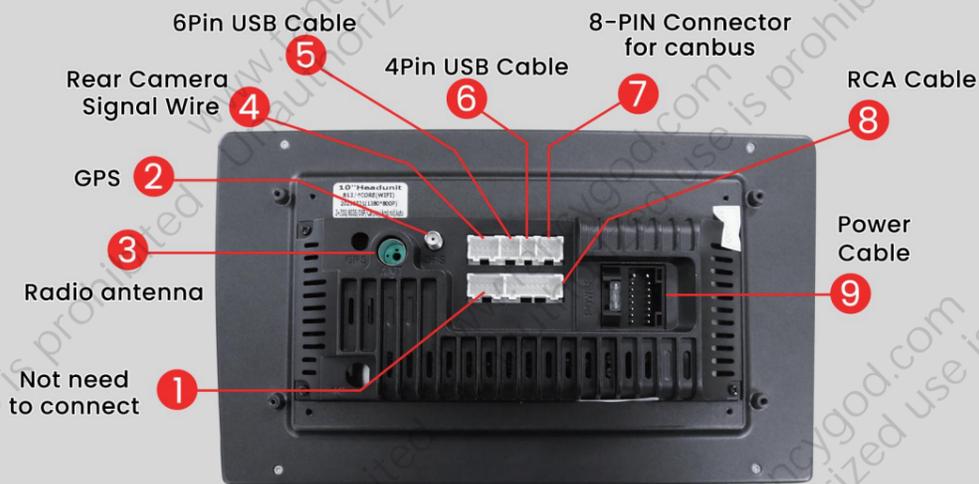
A-cables XC-1246

Connect the original car harness plug: power/speaker/SWC

⑨ the power socket

B-cables XC-1498

Connect the original car harness plug: power/speaker/SWC

XC-1498

⑪ Connecting the speaker

⑩ Connect the CANBUS

⑨ power Cable

Connect to the 8-pin ⑦ on the back of the head unit.

Find the one (Ⓐ or Ⓑ connector) for the OEM camera, and connect it to the Rear Camera Signal Wire female plug ④

Conenct to the AUDIO OUT female plugs(red and white)on the RCA cable ⑧

④ Rear Camera Signal Wire

③ Radio antenna Interface

⑥ 4Pin originalvehicle's USB Cable
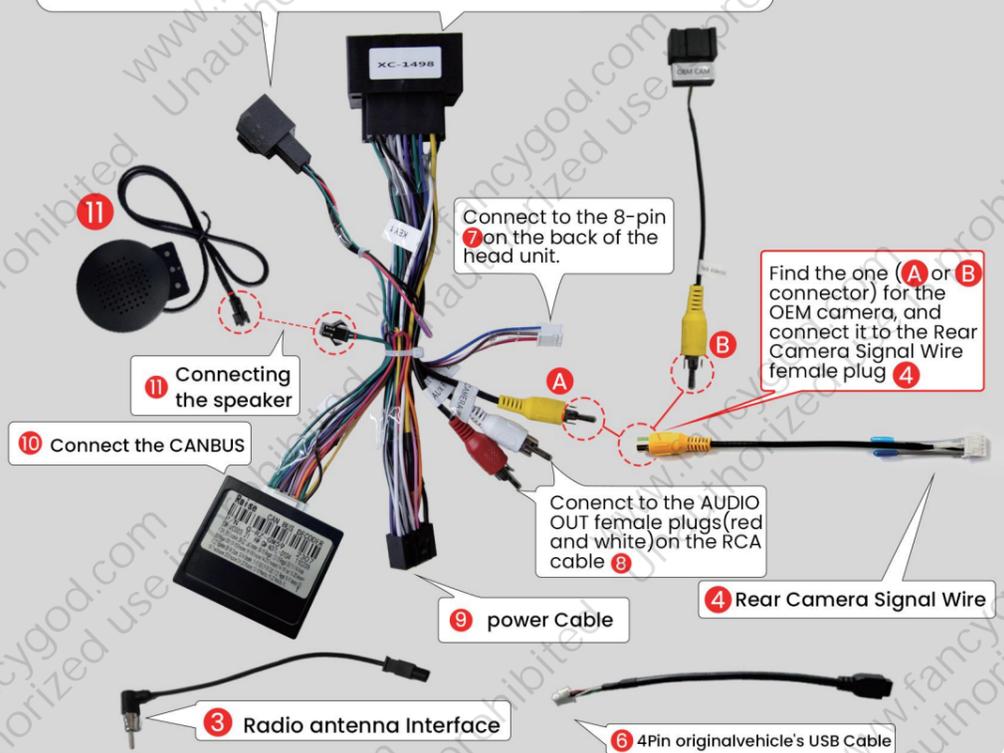
Power Line Definition Chart

Front Left (+)	○	○	Rear Right (+)
Front Left (−)	○	○	Rear Right (−)
Front Right (+)	○	○	Rear Left(+)
Front Right	○	○	Rear Left(−)
Steering Wheel Key(+)	○	○	Power Antenna(+)
Rear Camera(+)	○	○	Steering Wheel Key 2 (+)
Accessory/Ignition(+)	●	○	Dimmer/Illumination (+)
Chassis Ground (−)	●	●	Constant power supply

---

pin 3

black cable ② is connected to the backup light"-"

red cable ① connect together to the backup light"+"

② ①

Peel off protection adhesive of the pin3 wire ④ to expose the insulated core.

③

④

Connect pin3 wire ④ to camera wire ③.
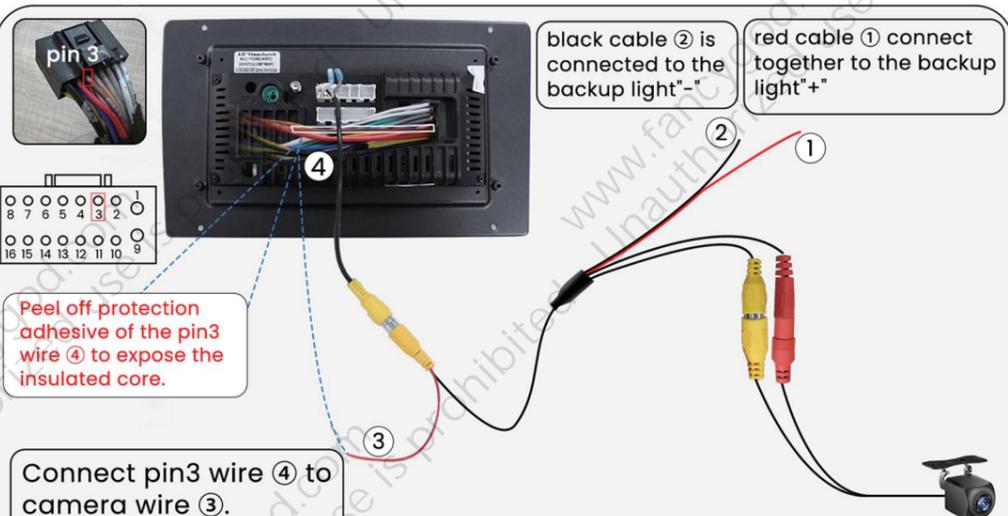
Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWCk1CYwF5s" on Youtube to find our supplied camera connection video tutorial

Note: please select the correct wiring harness (A-cables or B-cables) according to the shape and pin configuration of the factory car's plug.

If you are using **A-cables**, please follow the steps shown in picture ❶ : Enter Settings → Factory (enter password 3368), then select Car Model and choose "NULL—OTHER—No protocol—Null."

If your car has steering wheel control buttons, to ensure they work properly, open the SWC app on the radio and follow the app's instructions to manually learn the steering wheel control keys (as shown in picture ❷).
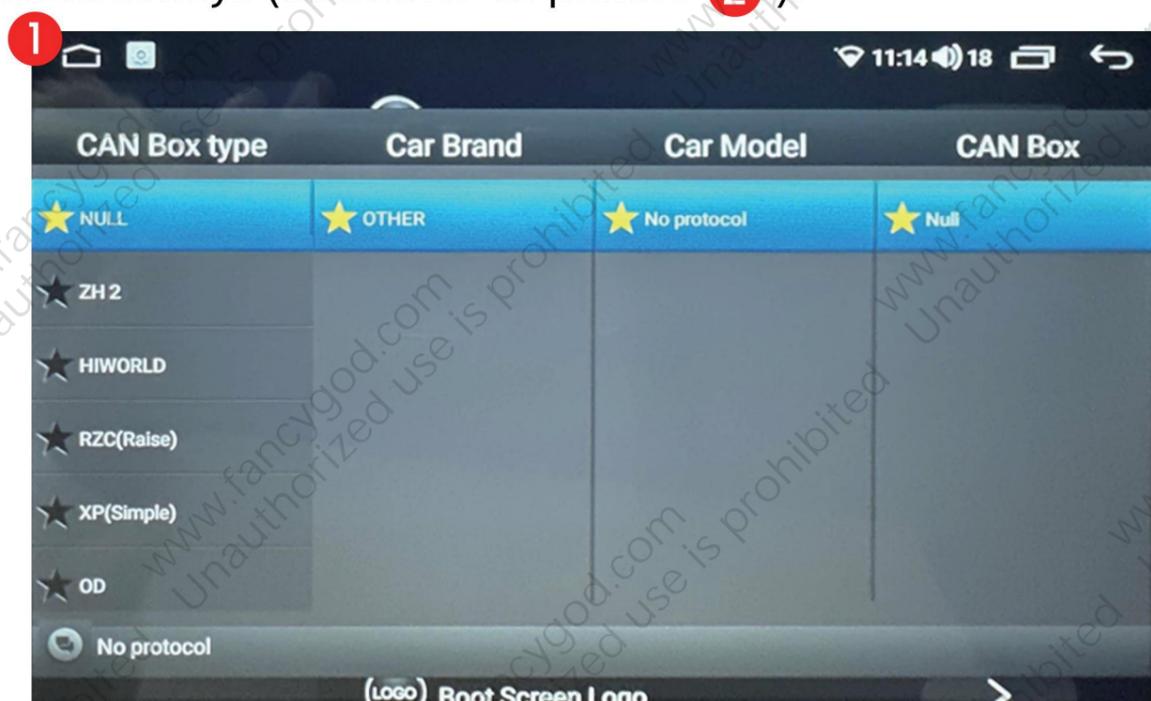
If you are using **B-cables**, to prevent issues with steering wheel controls, air conditioning, or volume not functioning properly, please follow the steps shown in Image ❸ :

Press Settings → Factory (input password: 3368) → Car Model, and select "RZC (Raise) — GM/Chevrolet — Cruze — 2009-2017."

CAN Box type	Car Brand	Car Model	CAN Box
⭐ RZC(Raise)	⭐ GM/Chevrolet	⭐ Cruze	⭐ 2009-2017
★ XP(Simple)	★ Toyota	★ Trailblazer	
★ OD	★ Nissan	★ Aveo	
★ LSDT	★ Ford	★ Envision	
★ BNR	★ HAVAL	★ Equinox	
★ DaoJun	★ Jeep	★ Verano GS	

Instructions