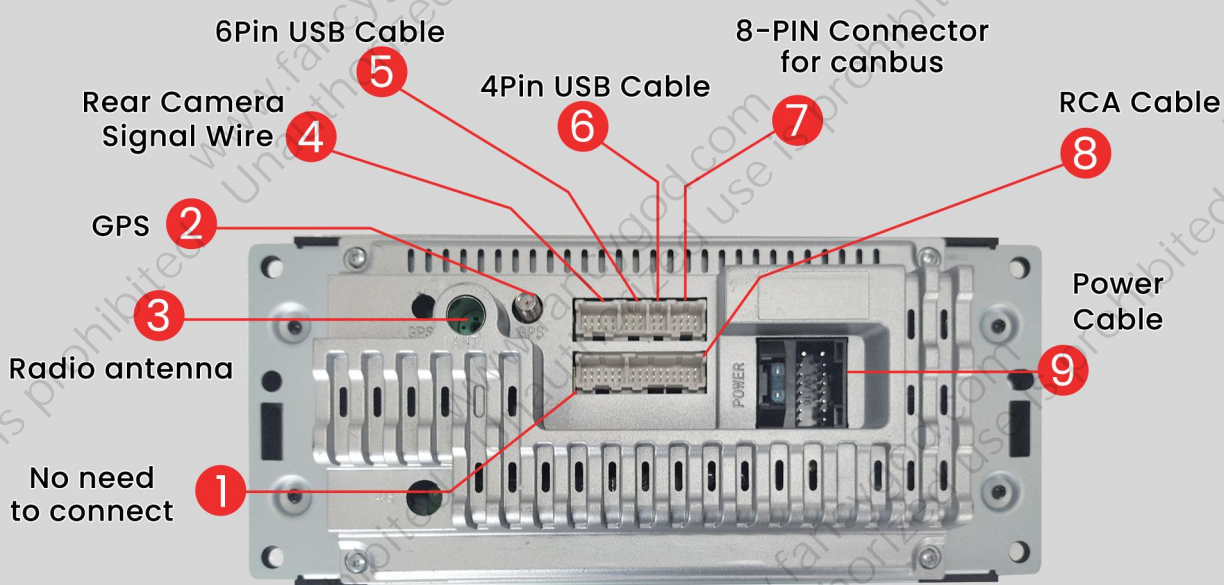# USE MANUAL

Car Stereo
Jeep Wrangler
2007-2017

Central Control Disassembly and Operation

Post-installation rendering
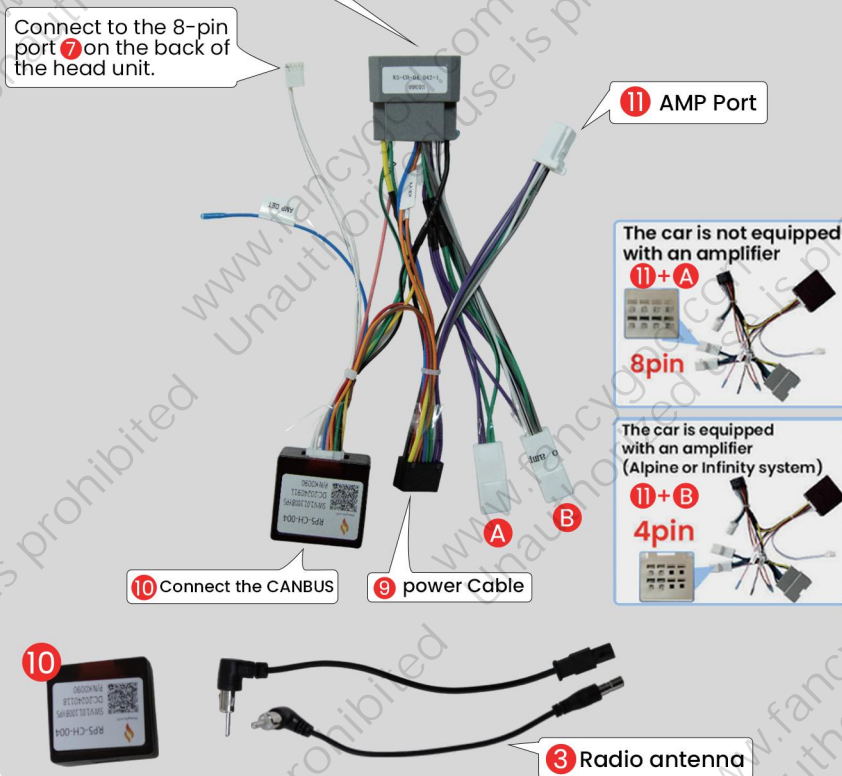

Wiring diagram

6Pin USB Cable ⑤

Rear Camera Signal Wire ④

4Pin USB Cable ⑥

8-PIN Connector for canbus ⑦

RCA Cable ⑧

GPS ②

③

Radio antenna

Power Cable ⑨

No need to connect ①

②
③
④
⑤
⑥ or
⑦
⑧
⑨

MIND the connector clip direction (clips end facing down).

Original Vehicle Wiring Diagram

Connect to the original car harness plug: power/speaker/SWC

Connect to the 8-pin port ⑦ on the back of the head unit.

⑪ AMP Port

The car is not equipped with an amplifier
⑪+Ⓐ
8pin

The car is equipped with an amplifier (Alpine or Infinity system)
⑪+Ⓑ
4pin

⑩ Connect the CANBUS
⑨ power Cable

⑩

③ Radio antenna

Power Line Definition Chart

Front Left (+)			Rear Right (+)
Front Left (−)			Rear Right (−)
Front Right (+)			Rear Left(+)
Front Right			Rear Left(−)
Steering Wheel Key(+)			Power Antenna(+)
Rear Camera (+)			Steering Wheel Key 2 (+)
Accessory/Ignition(+)	●		Dimmer/Illumination (+)
Chassis Ground (−)	●		Constant power supply

pin 3

black cable ② is connected to the backup light "−"

red cable ① connect together to the backup light "+"

Peel off protection adhesive of the pin3 wire ④ to expose the insulated core.

Connect pin3 wire ④ to camera wire ③.
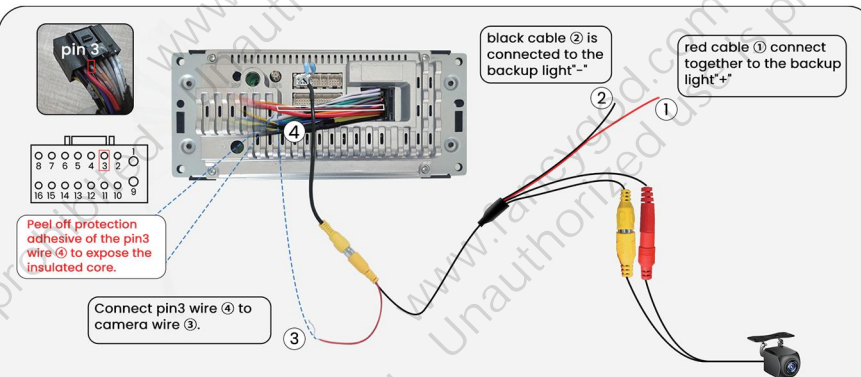
Wires color may be different due to various batches, but pin locations will be the same. You can search Youtube video ID "VWCk1CYwF5s" on Youtube to find our supplied camera connection video tutorial

---

For more guidance/video tutorial, please copy this link or scan the QR code to enter into our official website:

http://www.fancygod.com

Instructions

Pin9 AMP

Pin6 ACC

Canbus Cable

| 1 | 3 | 5 | 7 | 9 | 11 | 13 | 15 |
| 2 | 4 | 6 | 8 | 10 | 12 | 14 | 16 |

If there is no sound after installation, please manually connect the AMP cable to the ACC cable (refer to pic ❶), ensure the connection is correcet in order to power on the AMP and make the sound work.

(Note: You can use a lighter to soften and peel off the skin of AMP wire and the ACC wire (instead of cutting it off) then twist the two wires together and wrap them up. Please also use an insulating tape or a clip to protect the conjunction of them.)

Scan the QR code on the right to watch the wiring harness connection video

tutorial:

To prevent issues such as steering wheelcontrols not functioning, please be sure to follow the setup steps shown below:

Please press Settings-Factory Settings (input password 3368)-Car Model to Choose "XP(Simple) —Jeep—ALL—XP"

If the sound does not work properly after selecting the CAN box type to "XP", please switch the CAN box type to "XP.HIGH.AMP".